

ROCKSHOX

SID

# 2024+ SID SL, SID



SERVICE MANUAL



# **SAFETY FIRST!**

We care about YOU. Please, always wear your safety glasses and protective gloves when servicing RockShox products.

Protect yourself! Wear your safety gear!

## **⚠️ WARNING - PRESSURIZED DEVICE**

Suspension products may contain pressurized air, nitrogen, springs, and oil.

Always wear certified safety glasses (ANSI Z87.1, EN166 EU) when performing any service on a suspension product (suspension fork, rear shock, seatpost).

Failure to wear proper safety glasses can result in **SERIOUS INJURY OR DEATH.**


## RockShox Service

We recommend that you have your RockShox suspension serviced by a qualified bicycle mechanic. Servicing RockShox suspension requires knowledge of suspension components, as well as the use of specialized tools and lubricants/fluids. Failure to follow the procedures outlined in this service manual may cause damage to your component and void the warranty.

Visit [www.sram.com/service](http://www.sram.com/service) for the latest *RockShox Spare Parts Catalog* and technical information. For order information, please contact your local SRAM distributor or dealer.

Information contained in this publication is subject to change at any time without prior notice.

Your product's appearance may differ from the pictures contained in this publication.

 For recycling and environmental compliance information, please visit: [www.sram.com/en/company/about/environmental-policy-and-recycling](http://www.sram.com/en/company/about/environmental-policy-and-recycling).

## Suspension Safety Precautions and Warnings

### SAFETY INSTRUCTIONS

To avoid serious injury or death, you **MUST** understand and follow the safety information in this document.

#### **WARNING - PRESSURIZED DEVICE**

Suspension products may contain pressurized air, nitrogen, springs, and oil.

Always wear certified safety glasses (ANSI Z87.1, EN166 EU) when performing any service on a suspension product (suspension fork, rear shock, seatpost).

DO NOT attempt to disassemble a suspension product before the product is fully depressurized. Follow depressurization procedures and remove the air valve as instructed, before attempting disassembly of a suspension product.

When performing service on a suspension product, keep your eyes, face, and body away from any part or lubricant that can suddenly eject under high pressure. DO NOT direct any pressurized suspension part at a person.

DO NOT attempt to puncture, crush, or incinerate any assembled suspension product.

**Failure to follow these preventative measures can result in SERIOUS INJURY OR DEATH.**

#### **WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque.

To avoid separation of parts, threadlocker must be applied as instructed. Failure to apply threadlocker could result in separation of the parts.

Retaining rings must be fully seated in the retaining ring groove. Confirm the retaining ring is fully seated in the retaining ring groove after installation.

Do not use vinegar of any type to clean any part of a RockShox suspension product. Vinegar can cause permanent damage to parts which can, over time, result in product structural failure.

**Failure to follow these preventative measures can result in SERIOUS INJURY OR DEATH.**

#### **WARNING**

Do not ingest oil, fluid, grease, lubricant, or cleaner. Ingestion could lead to SERIOUS INJURY OR DEATH. Seek immediate medical attention if any oil, fluid, grease, lubricant, or cleaner is ingested.

#### **CAUTION**

Suspension products may contain lubricants which can lead to skin irritation. Always wear nitrile gloves when servicing suspension products. Failure to properly protect your skin can result in irritation. Seek medical attention if your skin is adversely affected by any suspension oil, fluid, grease, lubricant, and/or cleaner.

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

Use care when working with sharp tools and parts. Never use sharp tools coated with oil and/or grease. Clean and remove all oil and/or grease from your hands and gloves, and tools before working with any sharp tool or part. Failure to do so can result in personal injury.

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

# TABLE OF CONTENTS

<b>ROCKSHOX SERVICE</b> .....	<b>3</b>
<b>SUSPENSION SAFETY PRECAUTIONS AND WARNINGS</b> .....	<b>3</b>
<b>PART PREPARATION AND SERVICE PROCEDURES</b> .....	<b>6</b>
PART PREPARATION .....	6
SERVICE PROCEDURES.....	6
MODEL CODE IDENTIFICATION .....	7
WARRANTY AND TRADEMARK.....	7
PARTS, TOOLS, AND SUPPLIES .....	8
RECOMMENDED SERVICE INTERVALS.....	9
RECORD YOUR SETTINGS.....	9
TORQUE VALUES .....	9
OIL VOLUME AND LUBRICANT .....	10
<b>EXPLODED VIEW</b> .....	<b>11</b>
SID SL ULTIMATE \ FA (FLIGHT ATTENDANT) CHARGER RACE DAY 2.....	11
SID SL ULTIMATE \ CHARGER RACE DAY 2.....	12
SID ULTIMATE \ FA (FLIGHT ATTENDANT) CHARGER RACE DAY 2.....	13
SID ULTIMATE \ CHARGER RACE DAY 2 .....	14
SID SL SELECT+ \ CHARGER RACE DAY 2 .....	15
SID SELECT+ \ CHARGER RACE DAY 2 .....	16
SID SL SELECT \ CHARGER RL .....	17
SID SELECT \ CHARGER RL .....	18
SID SL BASE \ RUSH.....	19
SID BASE \ RUSH .....	20
FLIGHT ATTENDANT CONTROL MODULE - SID AND SID SL .....	21
<b>LOWER LEG REMOVAL AND SERVICE</b> .....	<b>22</b>
<b>50/200 HOUR SERVICE</b>	
LOWER LEG REMOVAL .....	22
<b>50 HOUR SERVICE</b>	
LOWER LEG SERVICE.....	26
<b>200 HOUR SERVICE</b>	
LOWER LEG SEAL SERVICE .....	28
<b>AIR SPRING SERVICE</b> .....	<b>31</b>
TRAVEL CHANGE ADJUSTMENT - OPTIONAL .....	31
BOTTOMLESS TOKEN - OPTIONAL INSTALLATION .....	31
<b>200 HOUR SERVICE</b>	
DEBONAIR AND DEBONAIR+ SERVICE.....	33
<b>FA (FLIGHT ATTENDANT) CHARGER RACE DAY 2 DAMPER SERVICE</b> .....	<b>41</b>
<b>200 HOUR SERVICE</b>	
FA CONTROL MODULE REMOVAL.....	41
FA CHARGER RACE DAY 2 DAMPER REMOVAL .....	44
<b>200 HOUR SERVICE</b>	
FA RACE DAY 2 BLEED PROCEDURE.....	45
TEST LOCKOUT COMPRESSION .....	50
FA CHARGER RACE DAY 2 DAMPER INSTALLATION .....	51
FA CONTROL MODULE INSTALLATION .....	53
<b>CHARGER RACE DAY 2 DAMPER SERVICE</b> .....	<b>57</b>
<b>200 HOUR SERVICE</b>	
CHARGER RACE DAY 2 DAMPER REMOVAL .....	57
<b>200 HOUR SERVICE</b>	
BLEED PROCEDURE.....	59
<b>200 HOUR SERVICE</b>	
CHARGER RACE DAY 2 DAMPER INSTALLATION.....	64

**CHARGER DAMPER RL SERVICE..... 66**

**200 HOUR SERVICE**

DAMPER REMOVAL ..... 66

**200 HOUR SERVICE**

DAMPER SERVICE..... 68

**200 HOUR SERVICE**

DAMPER ASSEMBLY ..... 71

TEST COMPRESSION..... 74

**200 HOUR SERVICE**

DAMPER INSTALLATION..... 75

**RUSH DAMPER RL SERVICE..... 77**

**200 HOUR SERVICE**

DAMPER REMOVAL ..... 77

**200 HOUR SERVICE**

DAMPER SERVICE..... 79

**200 HOUR SERVICE**

DAMPER ASSEMBLY ..... 82

TEST COMPRESSION..... 85

**200 HOUR SERVICE**

DAMPER INSTALLATION..... 86

**LOWER LEG ASSEMBLY..... 88**

**50/200 HOUR SERVICE**

LOWER LEG INSTALLATION ..... 88

## Part Preparation

Remove the component from the bicycle before service.

Disconnect and remove the remote cable or hydraulic hose from the fork or rear shock, if applicable. For additional information about RockShox remotes, user manuals are available at [www.sram.com](http://www.sram.com).

Clean the exterior of the product with mild soap and water to avoid contamination of internal sealing part surfaces.

## Service Procedures


The following procedures should be performed throughout service, unless otherwise specified.

Clean the part with RockShox Suspension Cleaner or isopropyl alcohol and a clean, lint-free shop towel. For hard to reach places (e.g. upper tube, lower leg), wrap a clean, lint-free shop towel around a non-metallic dowel to clean the inside.

Clean the sealing surface on the part and inspect it for scratches.

### **⚠ WARNING - CRASH HAZARD**

DO NOT use vinegar of any type to clean any part of a RockShox suspension product. Vinegar can cause permanent damage to parts which can, over time, result in product structural failure, serious injury, and possibly death.

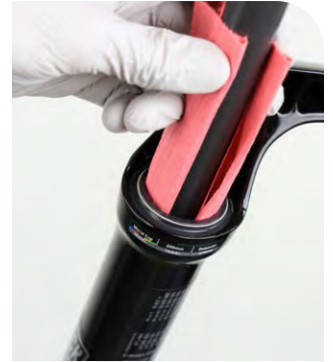


Replace the o-ring or seal with a new one from the service kit. Use your fingers or a pick to pierce and remove the old seal or o-ring.

Apply grease to the new seal or o-ring.

### **NOTICE**

Do not scratch any sealing surfaces when servicing the product. Scratches can cause leaks. Consult the spare parts catalog to replace the damaged part.

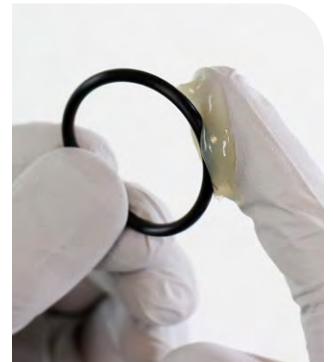

Use aluminum soft jaws when placing a part in a bench vise.

Tighten the part with a torque wrench to the torque value listed in the red bar. When using a crowfoot socket and torque wrench, install the crowfoot socket at 90 degrees to the torque wrench.

### **⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.



## Model Code Identification

Product model code and specification details can be identified with the serial number on the product. Model codes can be used to identify the product type, series name, model name, and product version associated with the production model year. Product details can be used to identify spare parts, service kit, and lubricant compatibility.

Model Code example: **FS-SID-ULT-D1**

**FS** = Product Type - **Front Suspension**

**SID** = Platform/Series - **SID**

**ULT** = Model - **Ultimate**

**D1** = Version - (**D** - fourth generation, **1** - first iteration)

To identify the model code, locate the serial number on the product and enter it into the **Search by Model Name or Serial Number** field at [www.sram.com/service](http://www.sram.com/service).

## Warranty and Trademark

For SRAM Warranty information, visit: [www.sram.com/warranty](http://www.sram.com/warranty).

For SRAM Trademark information, visit: [www.sram.com/website-terms-of-use](http://www.sram.com/website-terms-of-use).

## Parts, Tools, and Supplies

### Parts

- 2024+ SID Service Kit - 200 hour
- 2024+ SID SL Service Kit - 200 hour

### Safety and Protection Supplies

- Apron
- Clean, lint-free shop towels
- Nitrile gloves
- Oil pan
- Safety glasses

### RockShox Tools

- RockShox Bleed Syringe
- RockShox Charger vise blocks - 27.35 mm (Select)
- RockShox Reverb vise blocks (Base)
- RockShox Top Cap/Cassette tool (3/8" / 24 mm)
- RockShox Dust Seal Installation Tool 32 mm (SID SL) or 35 mm (SID)
- RockShox Shock Pump

### Lubricants and Fluids

- Isopropyl alcohol or RockShox Suspension Cleaner
- Maxima PLUSH Dynamic Suspension Lube Heavy
- Maxima PLUSH 3wt Suspension Oil
- SRAM Butter Grease
- Threadlocker Loctite Blue 242 or equivalent

### Bicycle Tools

- Bicycle stand
- Downhill tire lever

### Common Tools

- Air compressor and nozzle
- Bench vise and aluminum soft jaws
- Cable ties
- Crowfoot: 19 mm
- Hex wrenches: 1.5, 2, 2.5, 5, 8 mm
- Hex bit sockets: 1.5, 2, 2.5, and 5 mm
- Internal retaining ring pliers- large
- Long plastic or wooden dowel ( $\leq 16$  mm diameter)
- Open end wrench: 19 mm
- Pick, non-metallic
- Plastic or rubber mallet
- Sockets: 7 (Select/Base), 10 (Ultimate/Select+), and 24 mm
- Socket extension (Ultimate/Select+)
- Socket wrench
- T10 TORX wrench and bit socket
- Torque wrench



## Recommended Service Intervals

Regular service is required to keep your RockShox product working at peak performance. Follow this maintenance schedule and install the service parts included in each service kit that corresponds with the Service Hours Interval recommendation below. For spare part kit contents and details, refer to the RockShox Spare Parts Catalog at [www.sram.com/service](http://www.sram.com/service).

Service Hours Interval	Maintenance	Benefit
Every ride	Clean dirt from upper tubes and wiper seals.	Extends wiper seal lifespan
		Minimizes damage to upper tubes
		Minimizes lower leg contamination
Every 50 Hours	Perform lower leg service	Restores small bump sensitivity
		Reduces friction
		Extends bushing lifespan
Every 200 Hours	Perform damper and spring service	Extends suspension lifespan
		Restores small bump sensitivity
		Restores damping performance

## Record Your Settings

Use the charts below to record your settings to return your fork to its pre-service settings. Record your service date to track service intervals.

Service Hours Interval	Date of Service	Air Pressure	Rebound setting - count the number of clicks while turning the rebound adjuster fully counter-clockwise.
50			
100			
150			
200			

## Torque Values

Part	Tool	Torque
Bottom bolts	5 mm hex bit socket	SID: 7.3 N·m (65 in-lb) SID SL: 6.8 N·m (60 in-lb)
Top caps	Top cap/cassette tool or 24 mm socket	28 N·m (250 in-lb)
Bottomless Tokens	8 mm hex wrench and 24 mm socket and/or Top Cap/Cassette tool	4 N·m (35 in-lb)
Charger Race Day 2 rebound nut	10 mm socket	8.4 N·m (74 in-lb)
Charger Race Day 2 Damper adjuster knob retaining screw	1.5 mm	0.3 N·m (3 in-lb)
Charger Race Day 2 Damper adapter knob retaining screw	1.5 mm	0.3 N·m (3 in-lb)
Charger Race Day 2 Damper cable stop collar screw	1.5 or 2 mm	0.3 N·m (3 in-lb)
Charger Race Day 2 spool retaining screw	2 mm	0.3 N·m (3 in-lb)
Charger RL / RL R* / Rush Damper RL/RL R retaining screw	2.5 mm hex bit socket	1.4 N·m (12 in-lb)
Charger RL R* / Rush Damper RL R* cable stop collar bolt	2 mm hex bit socket	0.4 N·m (4 in-lb)
Charger RL / Rush Damper Sealhead to Cartridge	19 mm crowfoot	17 N·m (150 in-lb)
Charger RL / Rush Damper Top Cap to Cartridge	24 mm socket	17 N·m (150 in-lb)
Set screw (x2) - Flight Attendant Control Module to compression damper top cap	2 mm hex bit socket	0.3 N·m (3 in-lb)


\* remote adjust

# Oil Volume and Lubricant

Fork	Model	Travel	Damper				Spring							
			Damper	Upper Tube		Lower Leg		Spring	Upper Tube			Lower Leg		
				Oil	Volume (mL)	Oil**	Volume (mL)		Oil**	Volume (mL)	Grease	Oil**	Volume (mL)	
<b>SID</b> FS-SID-UFA-D1 FS-SID-ULT3-D1 FS-SID-ULT2-D1 FS-SID-SLP3-D1 FS-SID-SLP2-D1 FS-SID-SEL3-D1 FS-SID-SEL2-D1 FS-SID-BSE3-D1 FS-SID-BSE2-D1	Ultimate	110-120	Charger Race Day 2 (3 Position, 2 Position)	Maxima PLUSH 3wt	N/A	Maxima PLUSH Dynamic Suspension Lube Heavy	15	DebonAir+	Maxima PLUSH Dynamic Suspension Lube Heavy	3	SRAM Butter Grease Grease Air Piston	Maxima PLUSH Dynamic Suspension Lube Heavy	15	
	Select+													
	Select													Charger RL (3 Position, 2 Position)
	Base													Rush RL (3 Position, 2 Position)
<b>SID SL</b> FS-SIDS-UFA-D1 FS-SIDS-ULT3-D1 FS-SIDS-ULT2-D1 FS-SIDS-SLP3-D1 FS-SIDS-SLP2-D1 FS-SIDS-SEL3-D1 FS-SIDS-SEL2-D1 FS-SIDS-BSE3-D1 FS-SIDS-BSE2-D1	Ultimate	100-110	Charger Race Day 2 (3 Position, 2 Position)	Maxima PLUSH 3wt	N/A	Maxima PLUSH Dynamic Suspension Lube Heavy	10	DebonAir	Maxima PLUSH Dynamic Suspension Lube Heavy	3	SRAM Butter Grease Grease Air Piston	Maxima PLUSH Dynamic Suspension Lube Heavy	10	
	Select+													
	Select													Charger RL (3 Position, 2 Position)
	Base													Rush RL (3 Position, 2 Position)

Use ONLY RockShox, SRAM, and Maxima suspension oils/fluids and grease, unless otherwise specified. Use of any other lubricants can damage seals and decrease performance.

1. Flight Attendant Control Module
2. Battery
3. Battery block
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Top out bumper cone
20. Seal head
21. Retaining ring
22. Jounce bottom out bumper
23. Air shaft
24. Bottom cup
25. Crush washer
26. Bottom bolt

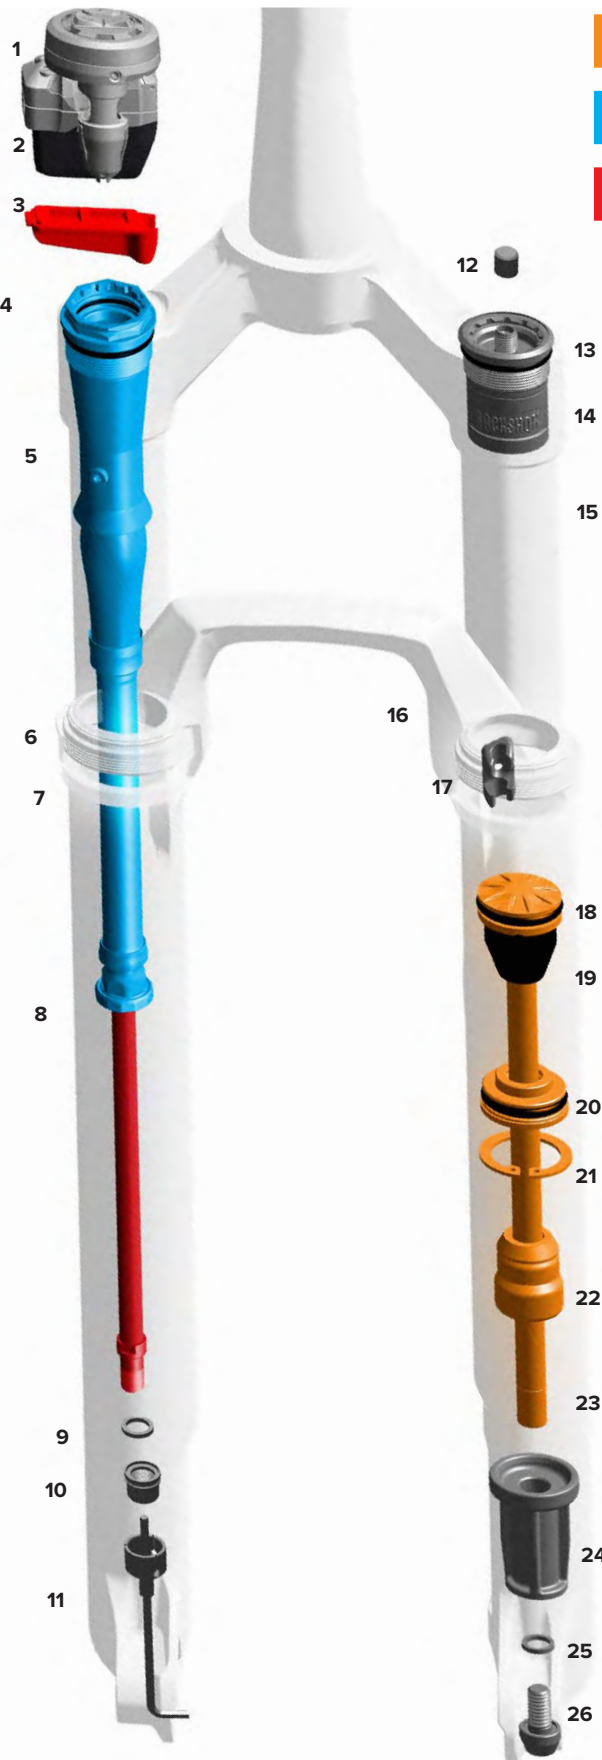

- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly

1. Adjuster knob and retaining screw
2. Adapter knob and retaining screw
3. Detent plate
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Top out bumper cone
20. Seal head
21. Retaining ring
22. Jounce bottom out bumper
23. Air shaft
24. Bottom cup
25. Crush washer
26. Bottom bolt
27. Spool and screw
28. Cable stop collar and screw




SID SL Ultimate R




1. Flight Attendant Control Module
2. Battery
3. Battery block
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Air piston
20. O-rings (x2)
21. Top out spring
22. Isolator
23. Seal head
24. Retaining ring
25. Jounce bottom out bumper
26. Air shaft
27. Bottom cup
28. Crush washer
29. Bottom bolt

- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly

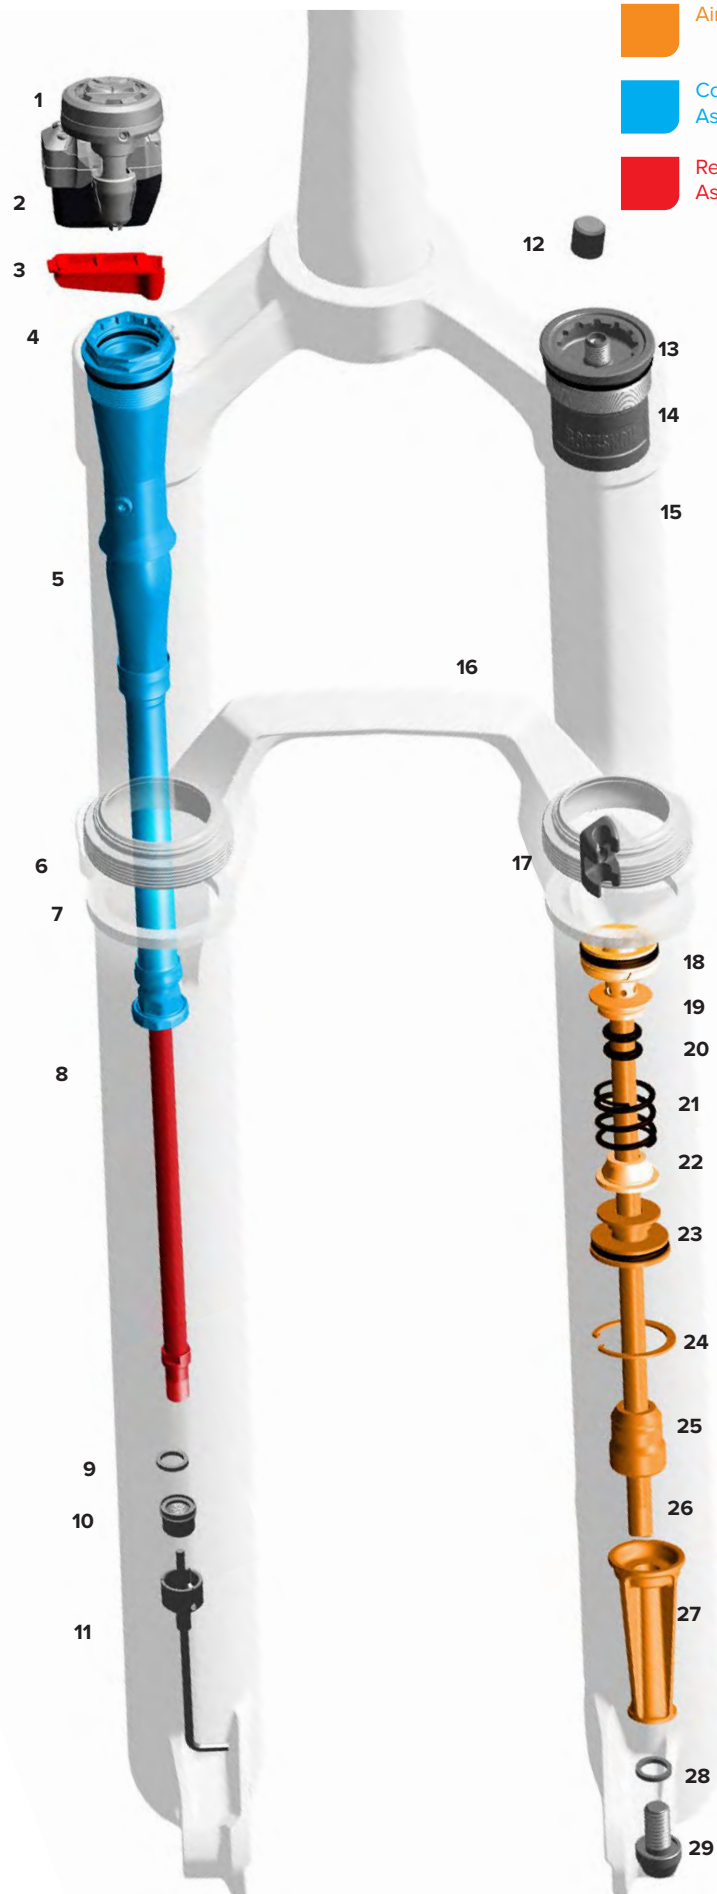

1. Adjuster knob and retaining screw
2. Adapter knob and retaining screw
3. Detent plate
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Air piston
20. O-rings (x2)
21. Top out spring
22. Isolator
23. Seal head
24. Retaining ring
25. Jounce bottom out bumper
26. Air shaft
27. Bottom cup
28. Crush washer
29. Bottom bolt
30. Spool and screw
31. Cable stop collar and screw

- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly

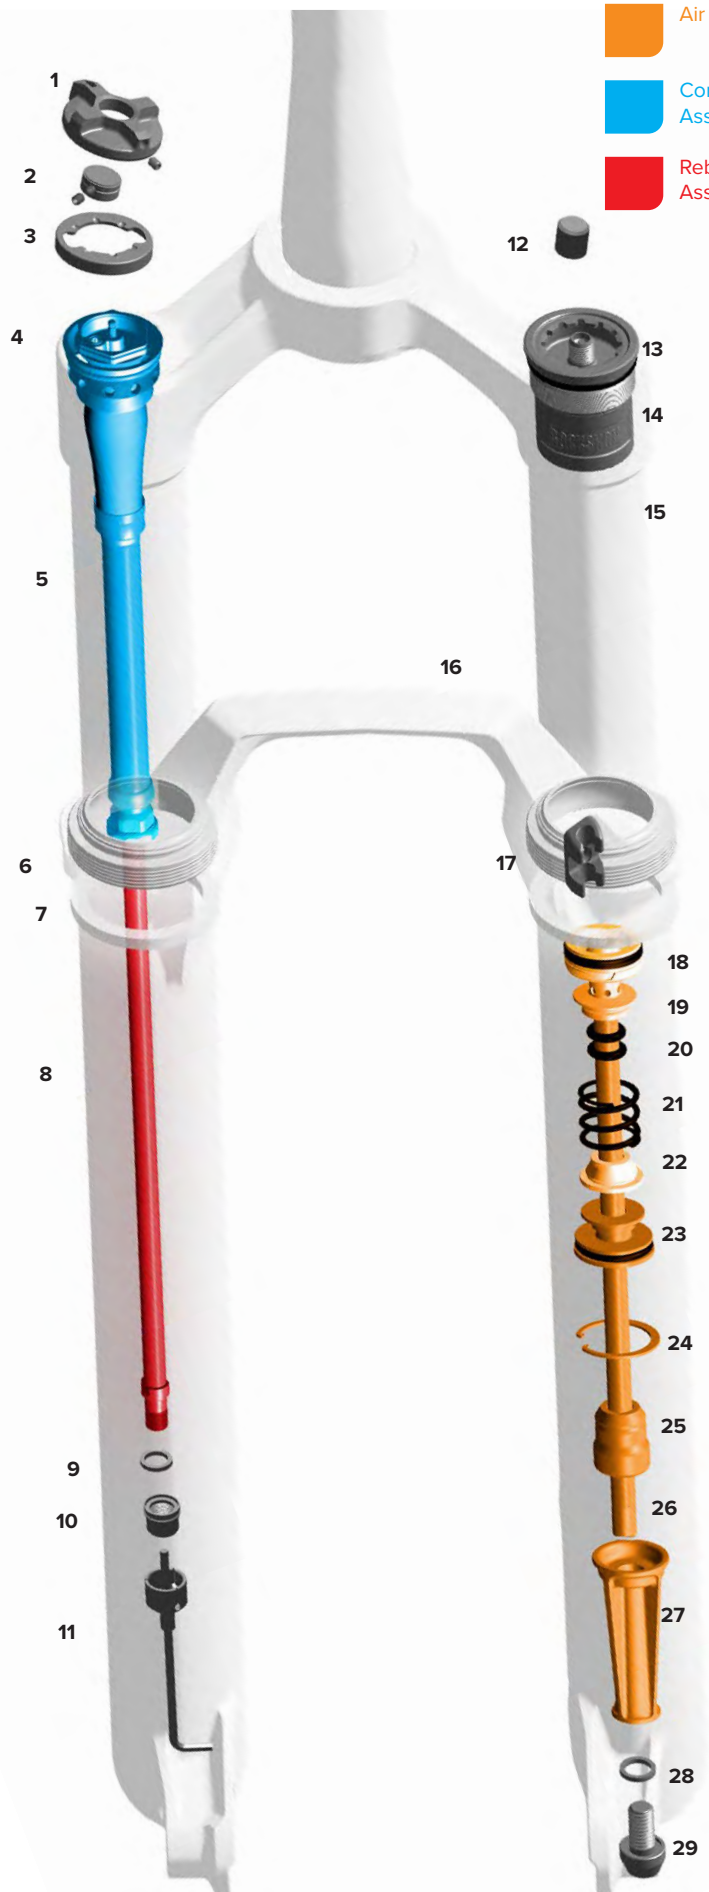


SID Ultimate R



1. Adjuster knob and retaining screw
2. Adapter knob and retaining screw
3. Detent plate
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Top out bumper cone
20. Seal head
21. Retaining ring
22. Jounce bottom out bumper
23. Air shaft
24. Bottom cup
25. Crush washer
26. Bottom bolt
27. Spool and screw
28. Cable stop collar and screw

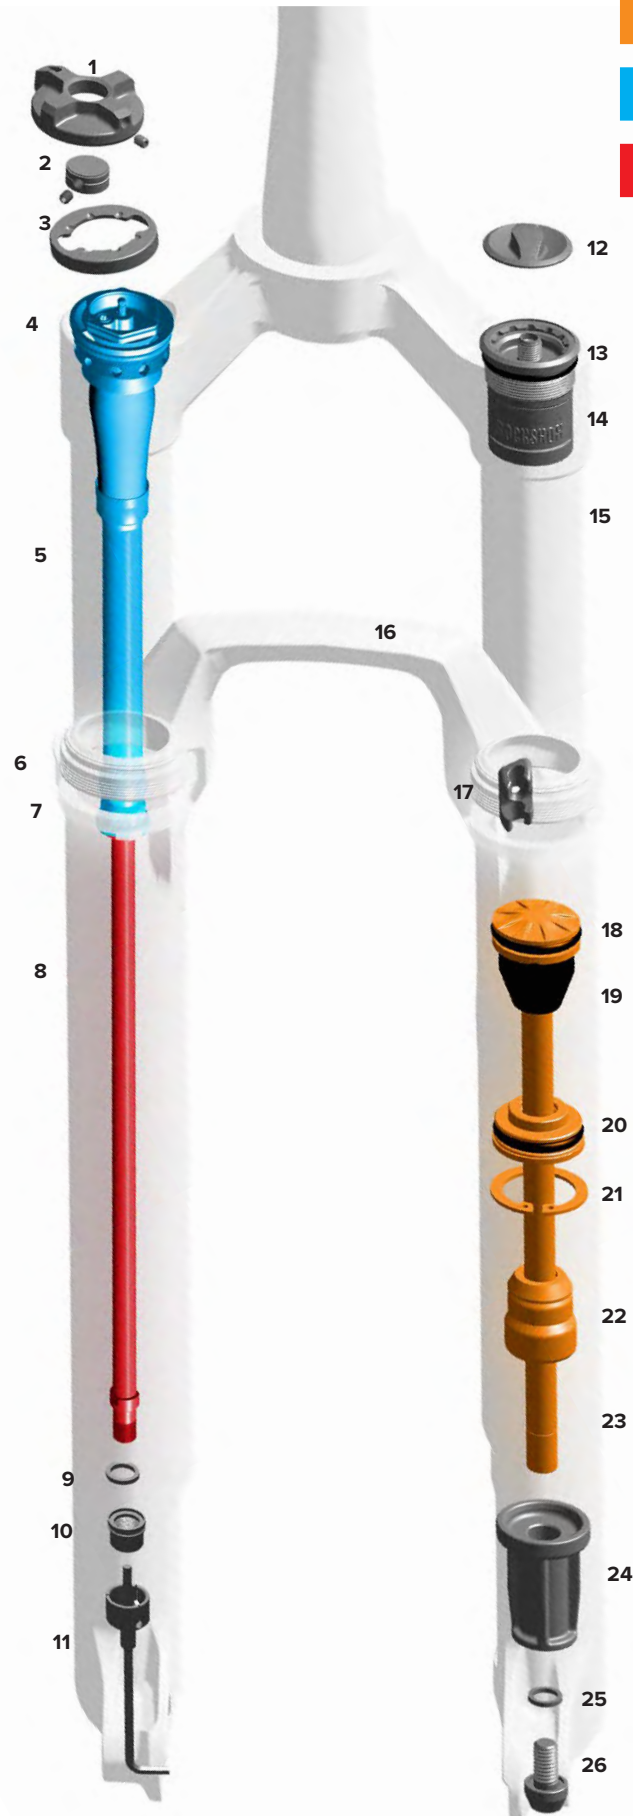


- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly




SID SL Select+ R



1. Adjuster knob and retaining screw
2. Adapter knob and retaining screw
3. Detent plate
4. Compression top cap
5. Compression damper
6. Wiper seal
7. Foam ring
8. Rebound damper shaft
9. Crush washer
10. Rebound nut
11. Rebound adjuster
12. Air valve cap
13. Top cap
14. Bottomless Token(s)
15. Upper tube
16. Lower leg
17. Brake hose guide
18. Air piston
19. Air piston
20. O-rings (x2)
21. Top out spring
22. Isolator
23. Seal head
24. Retaining ring
25. Jounce bottom out bumper
26. Air shaft
27. Bottom cup
28. Crush washer
29. Bottom bolt
30. Spool and screw
31. Cable stop collar and screw

-  Air Spring Assembly
-  Compression Damper Assembly
-  Rebound Damper Assembly

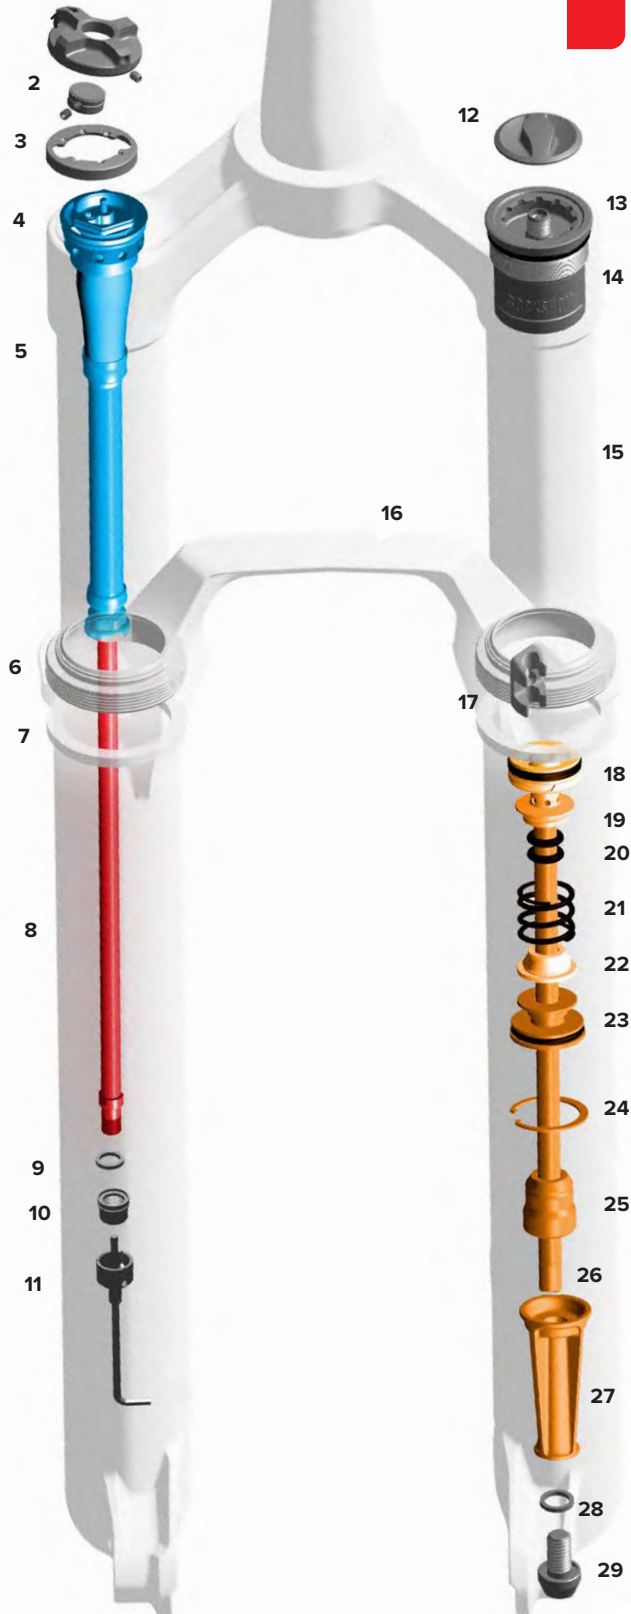


SID Select+ R






1. Lockout adjuster knob and retaining screw
2. Compression top cap
3. Compression damper
4. Cartridge tube
5. Wiper seal
6. Foam ring
7. Piston
8. Seal head
9. Rebound damper shaft
10. Crush washer
11. Rebound nut
12. Rebound adjuster
13. Air valve cap
14. Top cap
15. Bottomless Token(s)
16. Upper tube
17. Lower leg
18. Brake hose guide
19. Air piston
20. Top out bumper cone
21. Seal head
22. Retaining ring
23. Jounce bottom out bumper
24. Air shaft
25. Bottom cup
26. Crush washer
27. Bottom bolt
28. Retention screw
29. Spool
30. Cable stop collar and screw

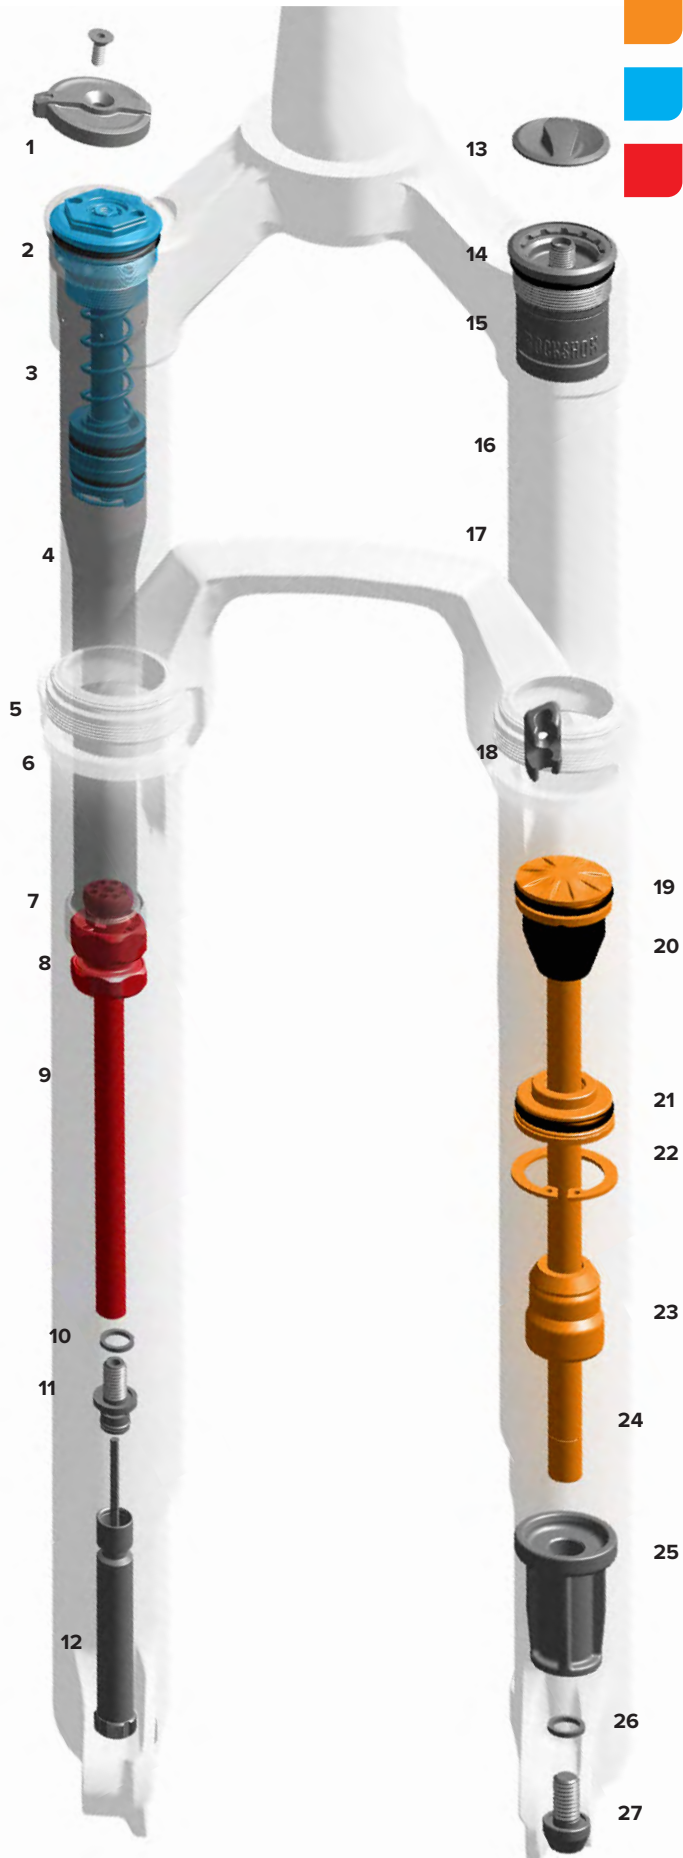


- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly

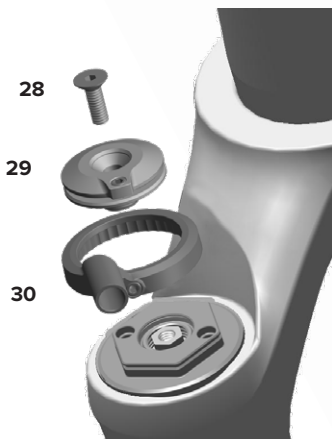


SID SL Select RL R




1. Lockout adjuster knob and retaining screw
2. Compression top cap
3. Compression damper
4. Cartridge tube
5. Wiper seal
6. Foam ring
7. Piston
8. Seal head
9. Rebound damper shaft
10. Crush washer
11. Bottom bolt
12. Rebound adjuster
13. Air valve cap
14. Top cap
15. Bottomless Token(s)
16. Upper tube
17. Lower leg
18. Brake hose guide
19. Air piston
20. O-rings (x2)
21. Top out spring
22. Isolator
23. Seal head
24. Retaining ring
25. Jounce bottom out bumper
26. Air shaft
27. Bottom cup
28. Crush washer
29. Bottom bolt
30. Retention screw
31. Spool
32. Cable stop collar and screw

-  Air Spring Assembly
-  Compression Damper Assembly
-  Rebound Damper Assembly

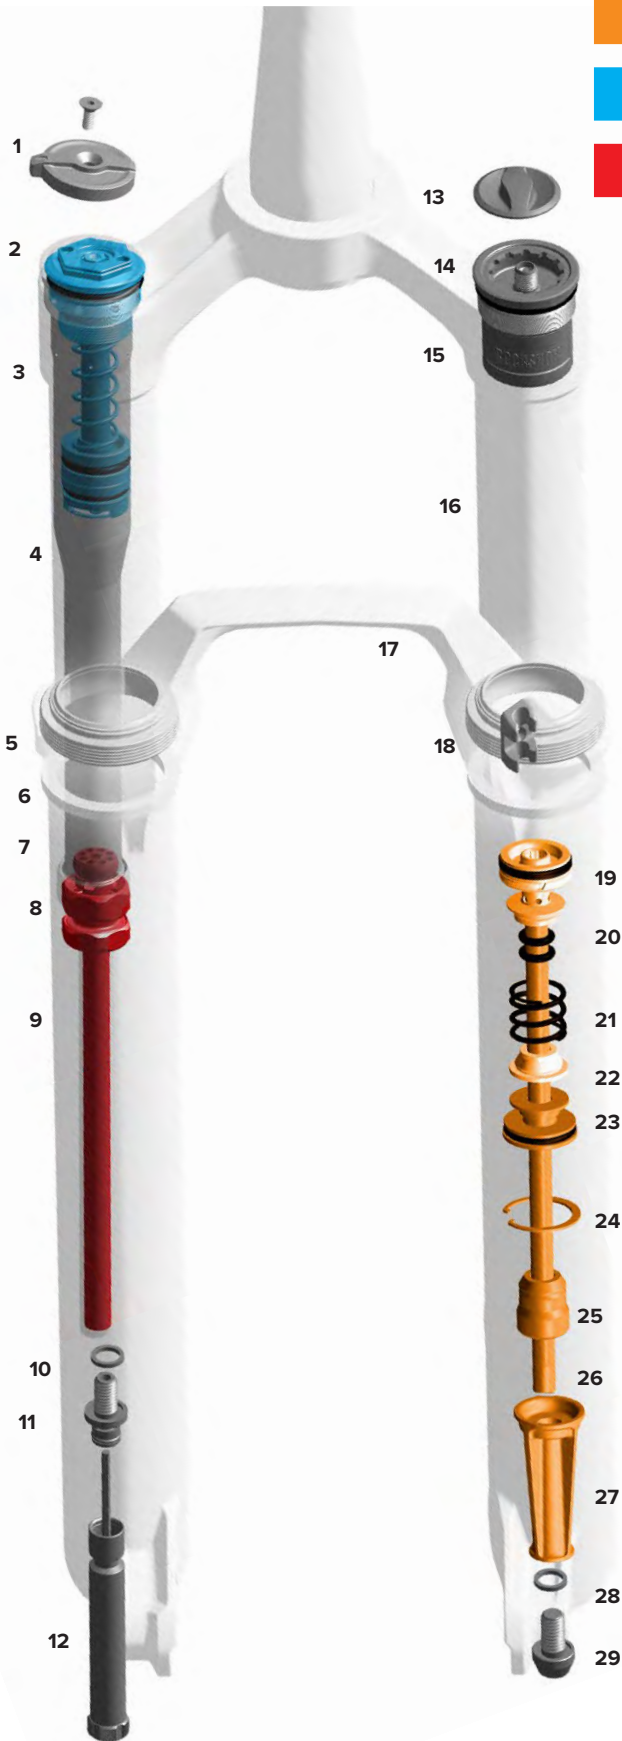


SID Select RL R

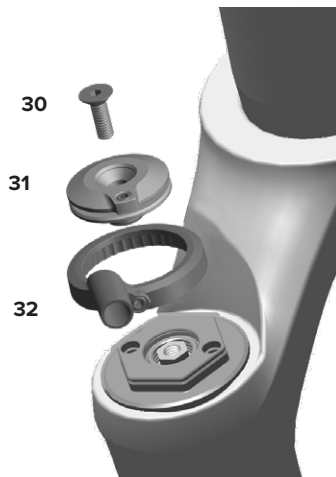


1. Lockout adjuster knob and retaining screw
2. O-ring and glide ring
3. Compression top cap
4. Compression damper
5. Cartridge tube
6. Wiper seal
7. Foam ring
8. Piston
9. Seal head
10. Rebound damper shaft
11. Crush washer
12. Rebound nut
13. Rebound adjuster
14. Air valve cap
15. Top cap
16. Bottomless Token(s)
17. Upper tube
18. Lower leg
19. Brake hose guide
20. Air piston
21. Top out bumper cone
22. Seal head
23. Retaining ring
24. Jounce bottom out bumper
25. Air shaft
26. Bottom cup
27. Crush washer
28. Bottom bolt
29. Retention screw
30. Spool
31. Cable stop collar and screw
32. Glide ring

- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly

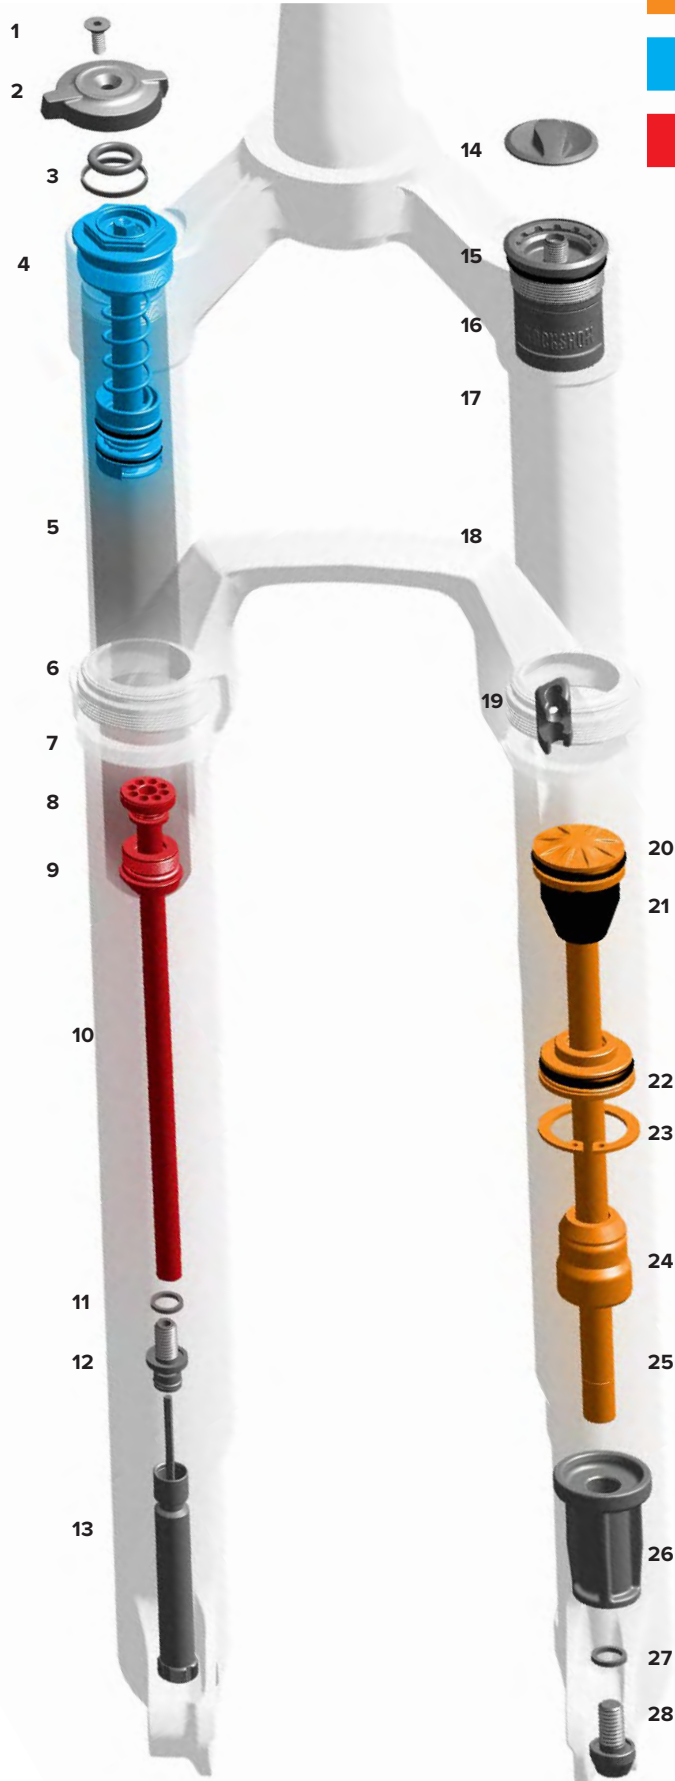


SID SL Base R

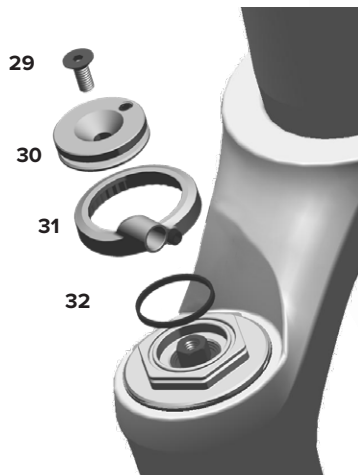


- Air Spring Assembly
- Compression Damper Assembly
- Rebound Damper Assembly




1. Lockout adjuster knob and retaining screw
2. O-ring and glide ring
3. Compression top cap
4. Compression damper
5. Cartridge tube
6. Wiper seal
7. Foam ring
8. Piston
9. Seal head
10. Rebound damper shaft
11. Crush washer
12. Rebound nut
13. Rebound adjuster
14. Air valve cap
15. Top cap
16. Bottomless Token(s)
17. Upper tube
18. Lower leg
19. Brake hose guide
20. Air piston
21. O-rings (x2)
22. Top out spring
23. Isolator
24. Seal head
25. Retaining ring
26. Jounce bottom out bumper
27. Air shaft
28. Bottom cup
29. Crush washer
30. Bottom bolt
31. Retention screw
32. Spool
33. Cable stop collar and screw
34. Glide ring

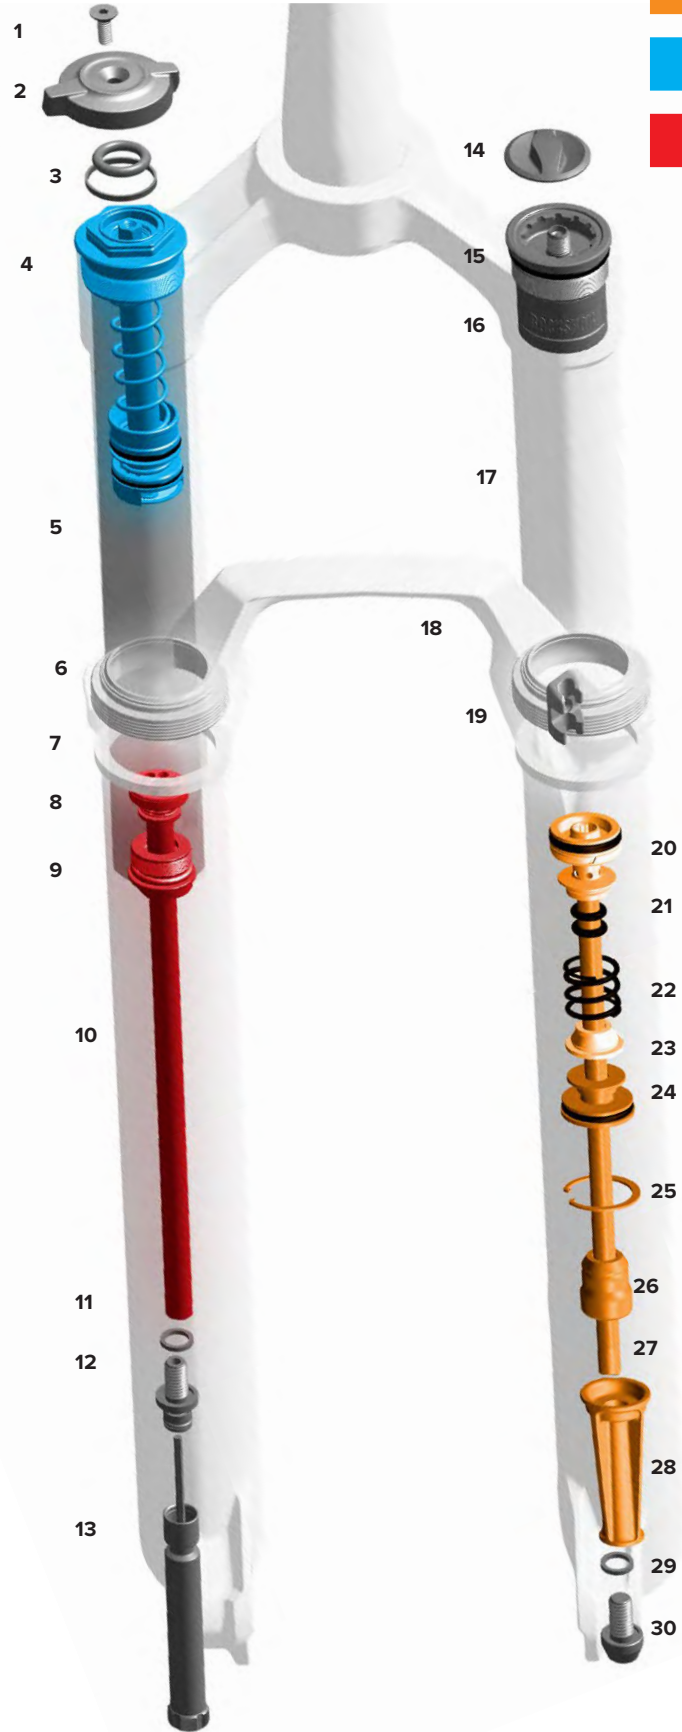

SID Base R

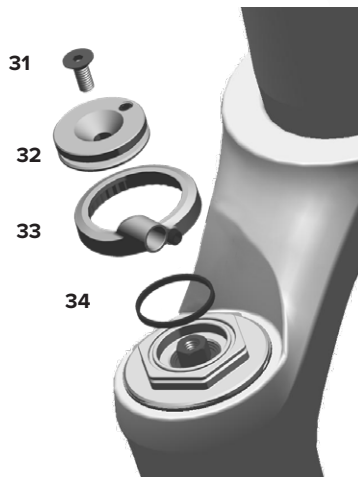

1. (-) Adjust button
2. Menu button
3. AXS LED indicator
4. AXS button
5. SRAM battery
6. Battery latch
7. Mode / Setting LED
8. (+) Adjust button
9. Flight Attendant Control Module
10. Set screw
11. Output driver (compression driver damper adjuster)
12. Compression damper
13. Battery block

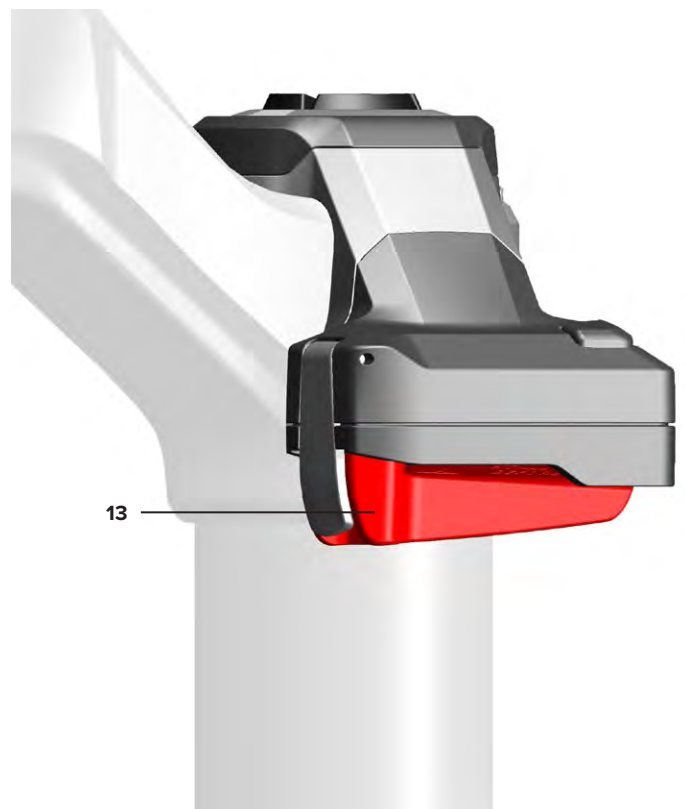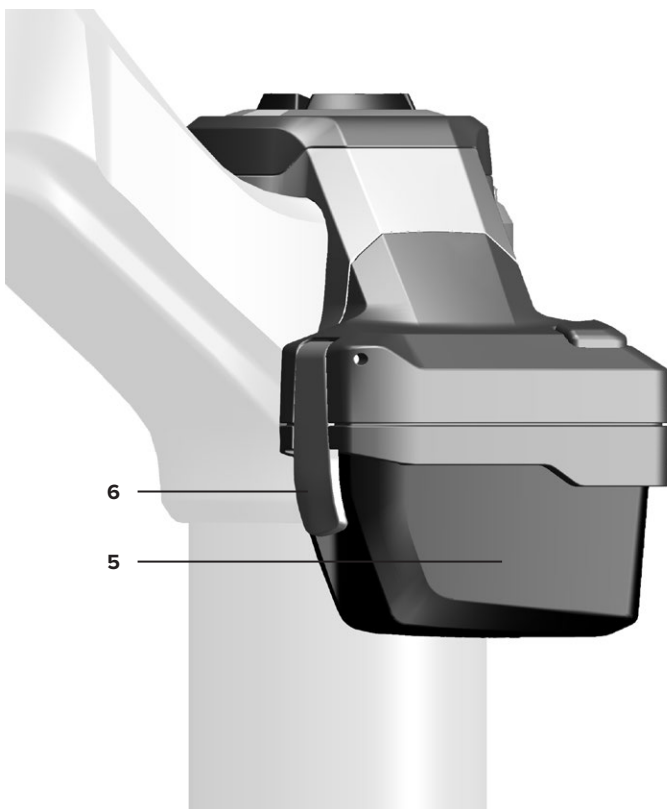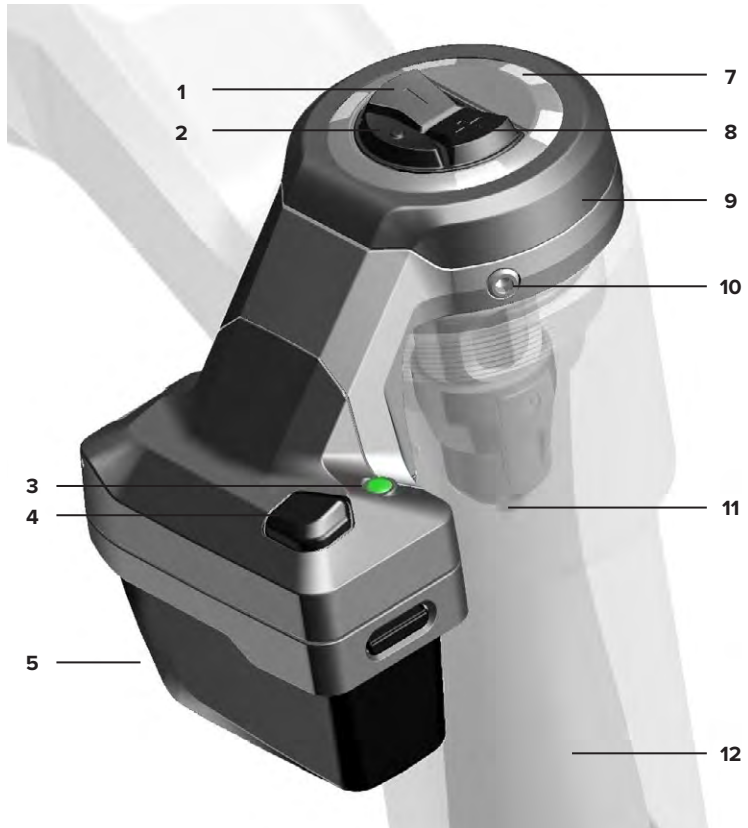

# Lower Leg Removal and Service

## 50/200 Hour Service Lower Leg Removal

- 1 All fork models: Clamp the fork in a bicycle work stand vertically with the steerer tube oriented upward.


### **⚠ WARNING - PRESSURIZED DEVICE**

To avoid possible SERIOUS INJURY OR DEATH, position the fork vertically with the steerer tube upward so the top cap is directed upward and away from you and others.




Bicycle work stand

- 2 Remove the rebound adjuster knob.

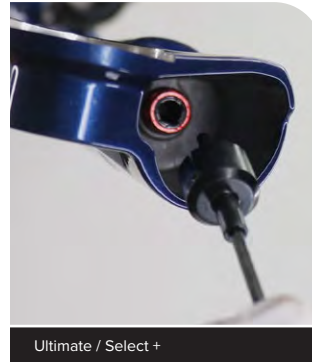

Ultimate / Select +

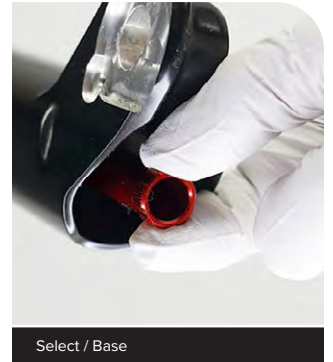

Select / Base

- 3 Remove the air valve cap.



Ultimate / Select +



Select / Base

4

**⚠ WARNING - PRESSURIZED DEVICE**

Always wear certified safety glasses (ANSI Z87.1, EN166 EU).  
Verify all air pressure is removed from the suspension component. Failure to do so can result in **SERIOUS INJURY OR DEATH**. Refer to the Suspension Safety Precautions and Warnings section for detailed Pressurized Device warnings and instructions.

Perform the following air transfer and purge process to depressurize the positive and negative air spring chambers.

While holding the lower leg arch and pushing the lower leg down, depress the Schrader valve and slowly release air pressure. While depressing the Schrader valve, slowly allow the lower leg to compress while applying opposing pressure until you feel a sudden decrease in compressing resistance, then hold the lower leg in place to allow both air chambers to depressurize. As air transfers from the negative to the positive air chamber, air transfer should be heard.

While depressing the Schrader valve, push the lower leg down to extend the fork until there is no resistance and the fork can be fully extended. The negative air spring chamber is fully depressurized when the fork can fully be extended and no resistance is felt.

Repeat the process two to three times.



Pick or small hex wrench



Pick or small hex wrench



Pick or small hex wrench



Pick or small hex wrench

5

Remove the Schrader valve core from the top cap and set it aside.



RockShox Schrader Valve Tool

6

Compress and extend the fork to confirm the negative air chamber has been depressurized.





7 Place an oil pan beneath the fork to catch the draining oil.

**CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.



8 **Ultimate / Select+:** Loosen the **spring side** bottom bolt 3 to 4 turns.  
**Select / Base:** Loosen both bottom bolts 3 to 4 turns.

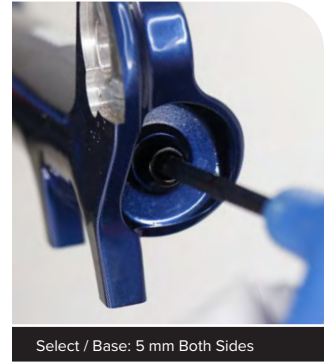
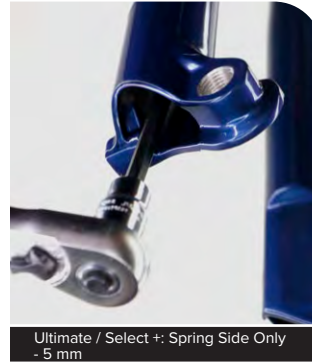


9 Insert a 5 mm extension or hex wrench into the bolt head of the **spring side** lower leg. Strike the wrench to dislodge the shaft from the lower leg. The bolt head should contact the bottom of the lower leg.

Remove the **spring side** bottom bolt. Clean the bolt and set it aside.

**NOTICE**

Do not strike the fork lower leg with mallet as this could damage the lower leg.

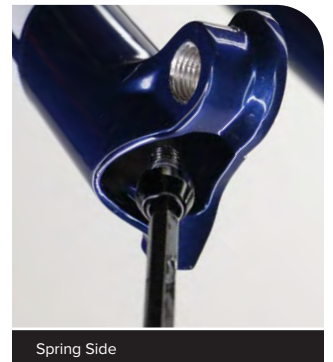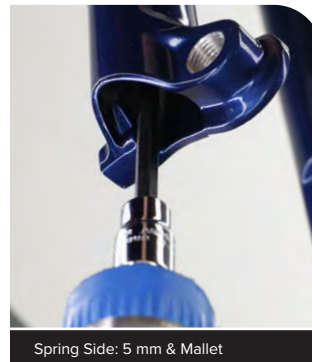



**10 Ultimate / Select +:** Use a 10 mm socket and extension to remove the rebound nut on the **damper side** lower leg.

Insert a 5 mm hex wrench into the rebound damper shaft. Strike the wrench to dislodge the shaft from the lower leg.

Push the shaft into the lower leg.

Discard the crush washer and rebound nut.

### NOTICE

Use a 5 mm straight hex bit with at least 10 mm of uniform 5 mm hex length. A flared wall tool may cause damage to the damper shaft.



Ultimate / Select +: Damper Side - 10 mm



Ultimate / Select +: Damper Side - 5 mm



Ultimate / Select +: Damper Side - 5 mm

**11 Select/Base:** Insert a 5 mm extension or hex wrench into the bolt head of the **damper side** lower leg. Strike the wrench to dislodge the shaft from the lower leg. The bolt head should contact the bottom of the lower leg. Remove the **damper side** bottom bolt. Clean the bolt and set it aside.

### NOTICE

Do not strike the fork lower leg with mallet as this could damage the lower leg.



Select / Base: Damper Side - 5 mm & Mallet



Select / Base: Damper Side - 5 mm

**12** Firmly pull the lower leg downward until fluid begins to drain. Continue pulling downward to remove the lower leg.

If the lower leg does not slide off of the upper tube or if oil does not drain from either side, the press fit of the shaft(s) into the lower leg may still be engaged. Reinstall the bottom bolts 2 to 3 turns and repeat the previous step.

### NOTICE

Do not strike the fork arch with any tool when removing the lower leg as this could damage the lower leg.




**50 Hour Service** Continue the 50 Hour Service with [Lower Leg Service](#).

**200 Hour Service** Continue the 200 Hour Service with [Lower Leg Seal Service](#).

1 Remove the wire spring.



2 Remove the foam rings.

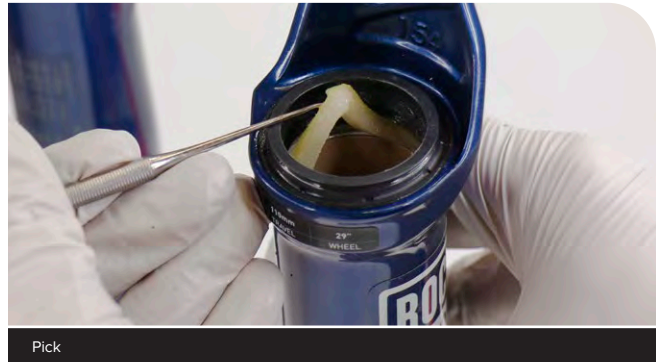

3 Clean the foam rings.



**4** Soak the foam rings in suspension oil.




**5** Remove the bottom out cup from the lower leg. Remove the jounce bumper from the lower leg, if necessary. Clean the inside and outside of the lower leg. Clean the wiper seals.



**6** Install the foam rings under the wiper seals.  
Confirm the foam rings are installed evenly in the space under the wiper seals and do not protrude over the bushings.  
Install the wire spring.



 **50 Hour Service** Continue the 50 Hour Service with [Lower Leg Installation](#).

- 1 Remove the outer wire springs from the wiper seals.  
Remove and discard the foam rings.




- 2 Stabilize the lower leg on a bench top or on the floor. Place the tip of a downhill tire lever under the wiper seal. Press down on the downhill tire lever handle to remove the seal.

Repeat on the other side. Discard the wiper seals.

**NOTICE**


Keep the lower leg stable. Do not allow the lower leg to twist in opposite directions, compress toward each other, or be pulled apart. This will damage the lower leg.

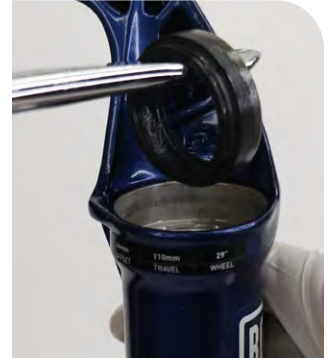

- 3 Remove the bottom cup from the lower leg. Remove the jounce bumper from the lower leg, if necessary. Clean the inside and outside of the lower leg.



- 4 Soak the new foam rings in suspension oil. Install the new foam rings into the lower leg.

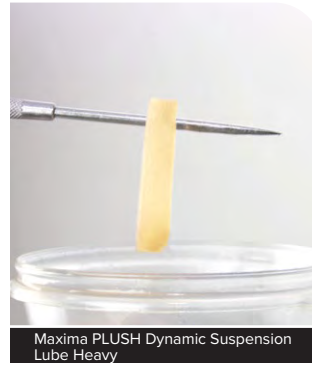

- 5 Remove the outer wire spring from each new wiper seal and set them aside.



- 6 **SID SL:** Use the 32 mm RockShox Dust Seal Installation tool.  
**SID:** Use the 35 mm RockShox Dust Seal Installation tool.  
Insert the narrow end of a new wiper seal into the recessed end of the RockShox Dust Seal Installation tool.




- 7** Hold the lower leg steady and use a mallet to seat the dust wiper seal into the lower leg until the seal surface is flush with the top of the lower leg.

Repeat on the other side.

**NOTICE**

Only press the wiper seal into the lower leg until it is flush with the top surface of the lower leg. Pressing the wiper seal below the top surface of the lower leg will compress the foam rings.

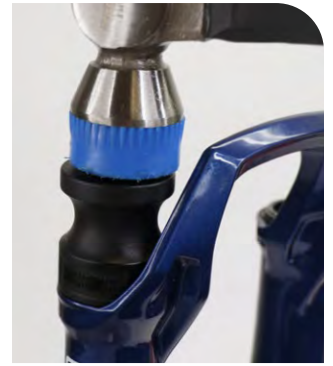

- 8** Install the outer wire spring.



- 200 Hour Service** Continue the 200 Hour Service with [DebonAir](#) and [DebonAir+ Service](#).

## Travel Change Adjustment - Optional

To increase or decrease the travel in your SID fork, the air spring must be replaced with the correct length air spring shaft assembly. Refer to the RockShox Spare Parts Catalog available on our website at [www.sram.com/service](http://www.sram.com/service) for spare part kit details.

## Bottomless Token - Optional Installation

Bottomless Tokens can be added to, or removed from, the air top cap to fine-tune the bottom out feel and spring curve. Bottomless Tokens reduce the air volume in your fork to create greater ramp at the end of the fork travel. Add tokens to maintain your fork's bottomless feel.


- 1 Clamp the fork in a bicycle work stand vertically with the steerer tube oriented upward.

### **⚠ WARNING - PRESSURIZED DEVICE**

To avoid possible **SERIOUS INJURY OR DEATH**, position the fork vertically with the steerer tube upward so the top cap is directed upward and away from you and others.



- 2 Confirm the Schrader valve core is **NOT INSTALLED** in the air spring top cap before proceeding. Remove the Schrader valve core if installed.

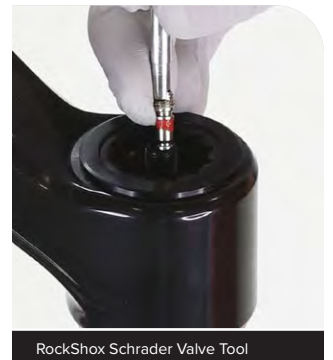


- 3 The positive and negative air spring chambers **must be FULLY depressurized** before removing the air spring top cap assembly.

Slowly compress and extend (push up/pull down) the air spring shaft to allow any remaining negative air pressure to bypass the air transfer dimple on the inside surface of the upper tube.

The negative air spring chamber is fully depressurized when the shaft can be pulled to full extension. When released, the air spring shaft will retract into the upper tube slightly due to pressure created when the air piston is extended past the air bypass dimple in the upper tube. This is normal.

Repeat the process two to three times.

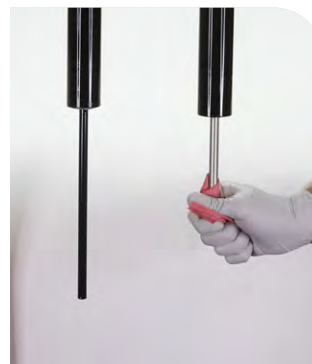

4

**⚠ WARNING - PRESSURIZED DEVICE**


Always wear certified safety glasses (ANSI Z87.1, EN166 EU).  
Verify all air pressure is removed from the suspension component. Failure to do so can result in **SERIOUS INJURY OR DEATH**. Refer to the Suspension Safety Precautions and Warnings section for detailed Pressurized Device warnings and instructions.

Unthread and remove the air spring top cap. Press down firmly when loosening the top cap.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.

Clean the upper tube threads.

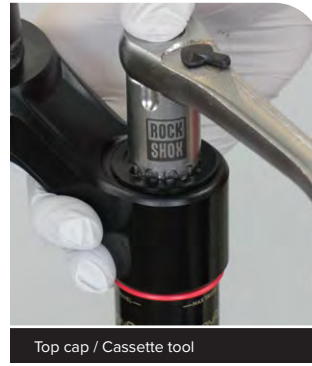

Top cap / Cassette tool





5

Thread a Bottomless Token into another token or into the bottom of the top cap.

**NOTICE**

The maximum amount of Bottomless Tokens for all SID forks is 3 tokens. Do not exceed.

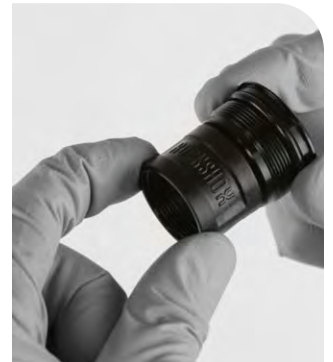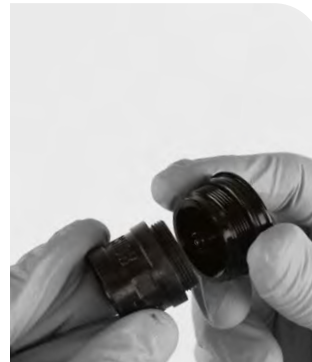

6

Tighten the token(s).

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.



8 mm

4 N-m (35 in-lb)

Top Cap / Cassette Tool



**200 Hour Service** Continue the 200 Hour Service for a [DebonAir and DebonAir+ Service](#).



**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray RockShox Suspension Cleaner or isopropyl alcohol onto each part and clean with a clean lint-free shop towel.

Apply SRAM Butter grease to the new seals and o-rings.




SRAM Butter Grease

- 1 Clamp the fork in a bicycle work stand vertically with the steerer tube oriented upward.

**⚠ WARNING - PRESSURIZED DEVICE**

To avoid possible **SERIOUS INJURY OR DEATH**, position the fork vertically with the steerer tube upward so the top cap is directed upward and away from you and others.

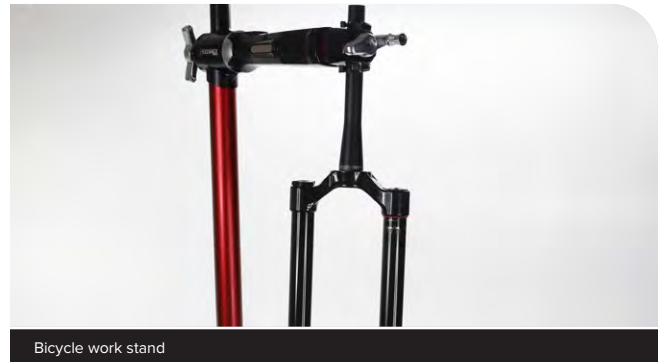


Bicycle work stand

- 2 Confirm the Schrader valve core is **NOT INSTALLED** in the air spring top cap before proceeding. Remove the Schrader valve core if installed.



RockShox Schrader Valve Tool

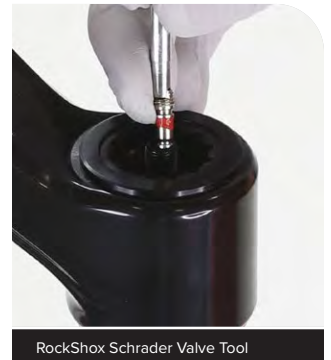

RockShox Schrader Valve Tool

- 3 The positive and negative air spring chambers **must be FULLY depressurized** before removing the air spring top cap assembly.

Slowly compress and extend (push up/pull down) the air spring shaft to allow any remaining negative air pressure to bypass the air transfer dimple on the inside surface of the upper tube.

The negative air spring chamber is fully depressurized when the shaft can be pulled to full extension. When released, the air spring shaft will retract into the upper tube slightly due to pressure created when the air piston is extended past the air bypass dimple in the upper tube. This is normal.

Repeat the process two to three times.



4

**⚠ WARNING - PRESSURIZED DEVICE**


Always wear certified safety glasses (ANSI Z871, EN166 EU).  
Verify all air pressure is removed from the suspension component. Failure to do so can result in **SERIOUS INJURY OR DEATH**. Refer to the Suspension Safety Precautions and Warnings section for detailed Pressurized Device warnings and instructions.

Unthread and remove the air spring top cap. Press down firmly when loosening the top cap.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.

Clean the upper tube threads.

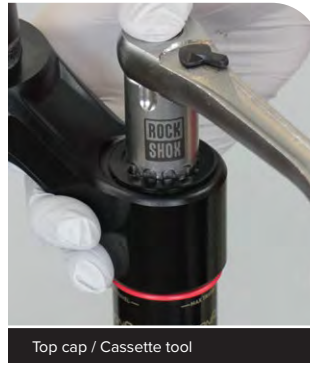

Top cap / Cassette tool



5

Remove the top cap o-ring and discard it.  
Apply grease to a new o-ring and install it.



6

Remove the jounce bottom out bumper from the air shaft, if installed.



7

Push the air shaft into the upper tube to prevent it from getting scratched while removing the retaining ring.


Place the tips of large retaining ring pliers into the eyelets of the retaining ring.

**NOTICE**

Scratches on the air shaft will allow air to bypass the seal head into the lower leg. Scratches can result in reduced spring performance.



**⚠ WARNING - PRESSURIZED DEVICE**

Always wear certified safety glasses (ANSI Z871, EN166 EU).  
Verify all air pressure is removed from the suspension component. Failure to do so can result in **SERIOUS INJURY OR DEATH**. Refer to the Suspension Safety Precautions and Warnings section for detailed Pressurized Device warnings and instructions.

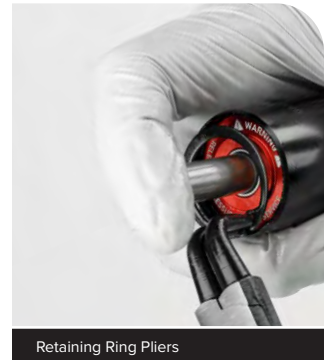

Retaining Ring Pliers


- 8 Firmly pull on the air shaft to remove the air spring assembly from the upper tube. Clean and inspect the assembly for damage.

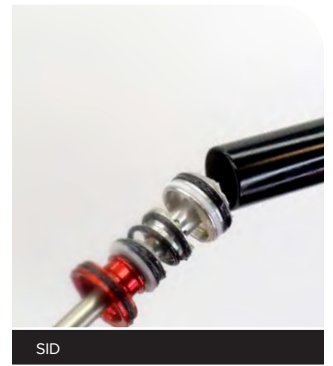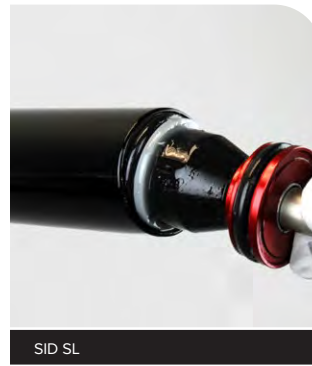

- 9 Clean the inside and outside of the upper tube.  
Inspect the inside and outside of the upper tube for damage.

**NOTICE**

Scratches on the inside surface of the upper tube can cause air to leak. If an internal scratch is visible, then replace the crown steerer upper tube (CSU).

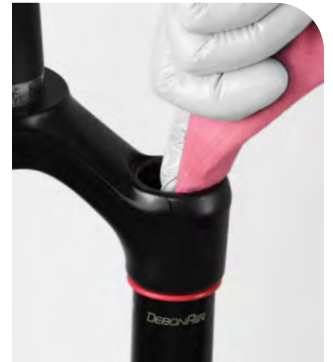

**10** **SID SL:** Remove the seal head from the air shaft.

**SID:** Remove the seal head and o-ring from the air shaft.

Clean and inspect the shaft for damage.

**NOTICE**

Scratches on the air spring shaft can cause air to leak. If a scratch is visible the air spring assembly may need to be replaced.



SID SL



SID



SID

**11** Remove the outer and inner o-rings on the seal head.

Clean the seal head.

Apply grease and install new o-rings.




SID SL



SID SL



SID

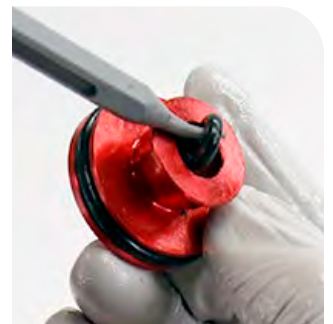

SID




12

SID/SID SL: Remove the air piston outer o-ring.

SID: Remove the glide ring.



SID/SID SL: Clean the air piston. Apply grease and install a new o-ring.

SID: Install a new glide ring.

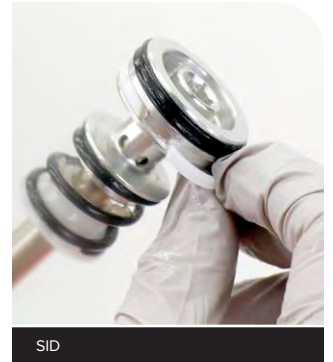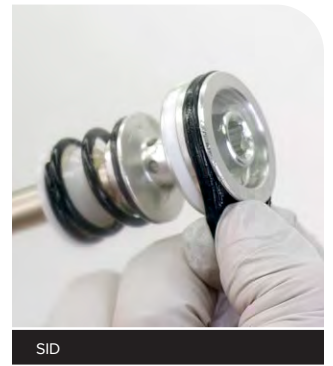
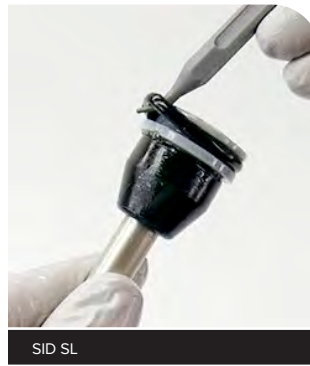


13

**SID Only:** Place the spring on a hard surface in the vertical position. Hold onto the top out spring and push down to dislodge the top out spring and isolator from the air piston. Remove the spring and isolator.

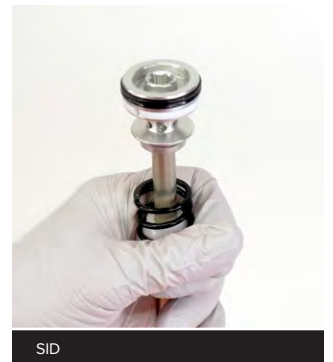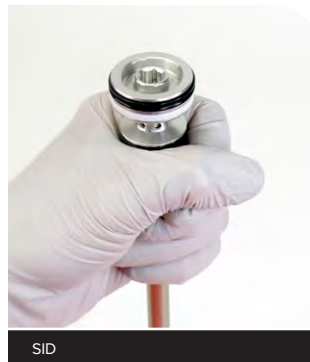

Remove the two o-rings. Clean the shaft.

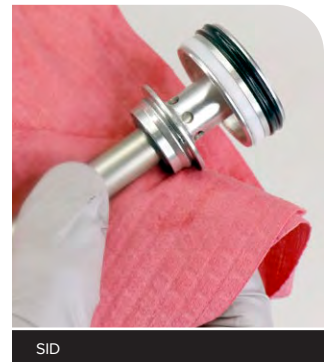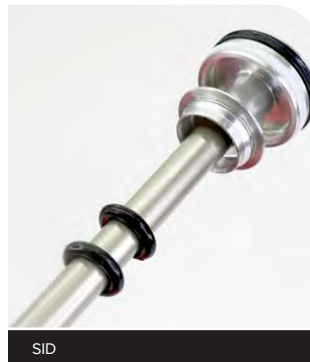


- 14** **SID Only:** Install the o-rings (x2) onto the shaft.  
Install the top out spring and isolator onto the shaft.

Compress the spring while turning clockwise to thread the spring coil onto the air piston gland. The spring should seat in the air piston.


**NOTICE**

Failure to seat the spring onto the air piston will result in the air spring not functioning properly.


Install the o-ring onto the shaft.

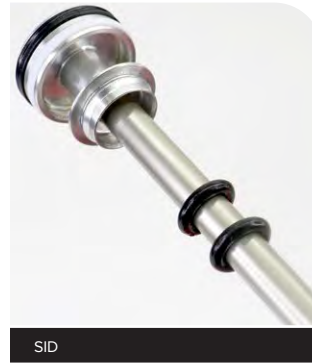


SID

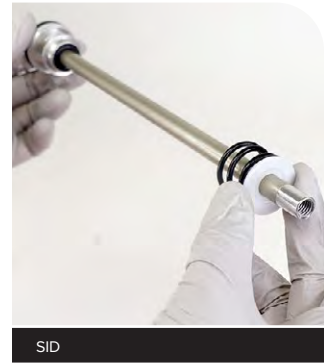

SID

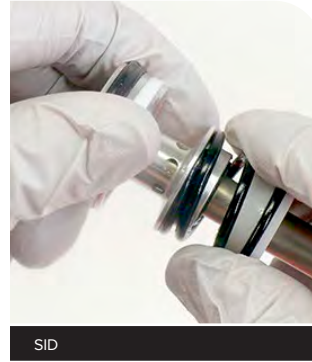


SID

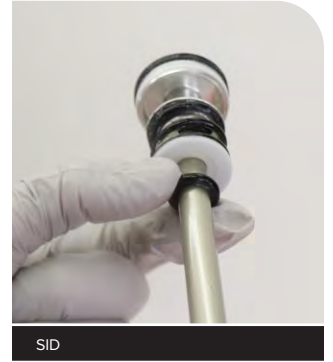


SID

- 15** Apply a liberal amount of grease around the air shaft.  
Install the seal head onto the air shaft.

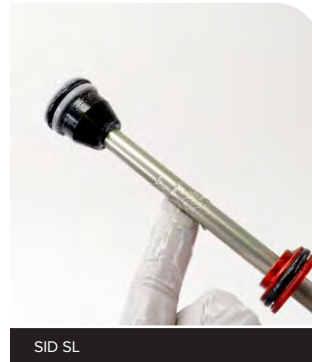


SID SL

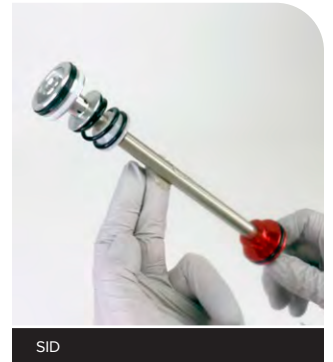


SID

- 16** Apply a liberal amount of grease to the air piston.

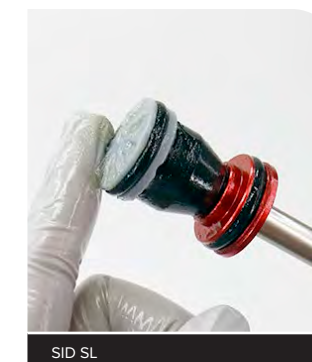

SID SL

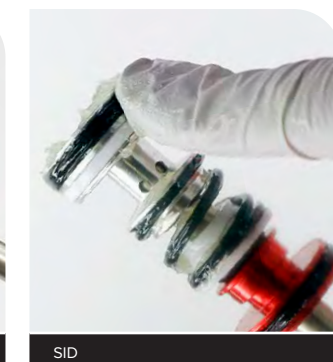


SID


- 17** Apply a liberal amount of grease evenly around the end of a clean plastic dowel, approximately 60 mm from one end. Use the dowel to apply the grease to the inside surface of the upper tube, approximately 60 mm into the tube.



- 18** Insert the air spring assembly into the upper tube. Firmly push the air piston into the upper tube. Insert the seal head into the upper tube and firmly press it into the upper tube until it stops.

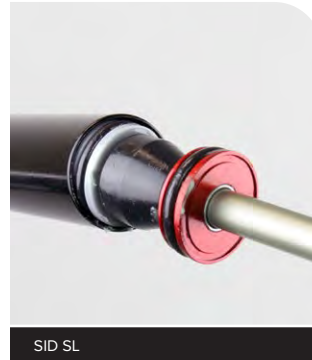

SID SL

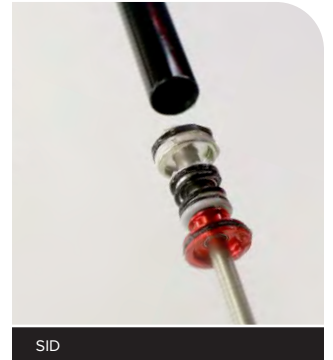

SID


- 19** Retaining rings have a sharper-edged side and a rounder edged side. Installing retaining rings with the sharper-edged side facing the tool will allow for easier installation and removal.

Place the tips of the retaining ring pliers into the eyelets of the retaining ring. Guide the retaining ring with your finger to prevent the shaft from getting scratched while installing the retaining ring.


Use the pliers to push the seal head into the upper tube while installing the retaining ring into the groove. Release the retaining ring pliers when the ring is fully seated in the groove.

#### NOTICE

Do not scratch the air spring shaft. Scratches on the air shaft will allow air to bypass the seal head into the lower leg, resulting in reduced spring performance.

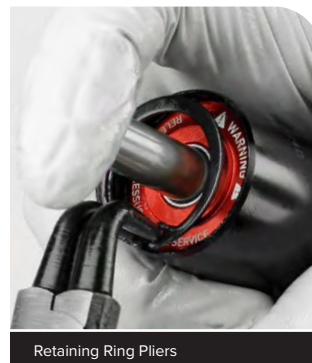

Retaining Ring Pliers

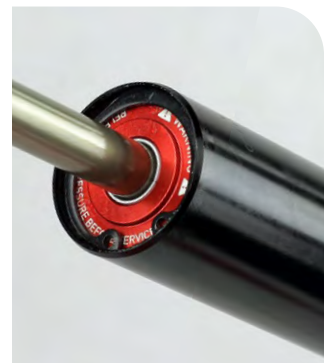


**Confirm the retaining ring is properly seated in the retaining ring groove by using the retaining ring pliers to rotate the retaining ring and seal head back and forth a few times, then firmly pull down on the air shaft.**

#### ⚠ WARNING - CRASH HAZARD

Retaining rings must be fully seated in the retaining ring groove. Confirm the retaining ring is fully seated in the retaining ring groove after installation. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

**20** Install the jounce bottom out bumper on the air shaft.

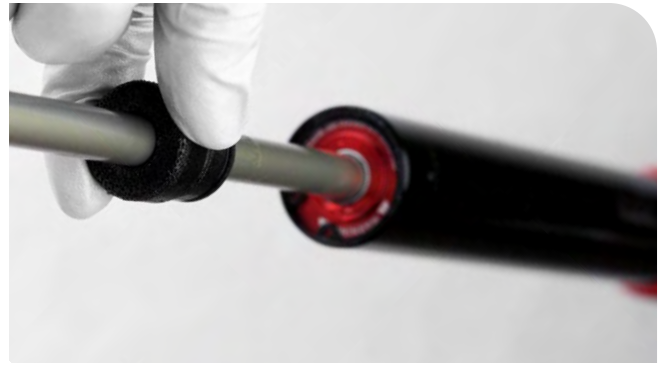

**21** Inject or pour suspension oil into the air spring upper tube.



**22** Install the top cap and tighten.

**⚠ WARNING - CRASH HAZARD**


Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.




Top Cap / Cassette Tool

28 N·m (250 in-lb)

**23** Install the Schrader valve core into the top cap and tighten it finger tight.

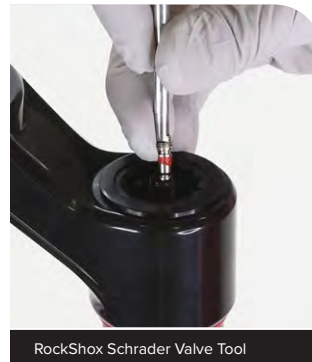

RockShox Schrader Valve Tool

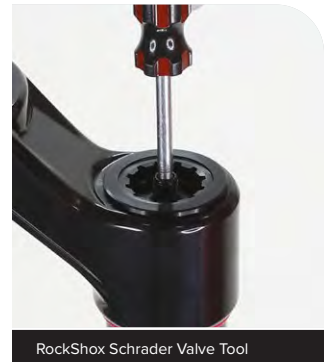

RockShox Schrader Valve Tool

**200 Hour Service** Continue the 200 Hour Service for a [Flight Attendant Charger Race Day 2 Damper](#).

**200 Hour Service** Continue the 200 Hour Service for a [Charger Race Day 2 Damper](#).

**200 Hour Service** Continue the 200 Hour Service for a [Charger Damper RL](#).

**200 Hour Service** Continue the 200 Hour Service for a [Rush Damper](#).



**⚠ CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray RockShox Suspension Cleaner or isopropyl alcohol onto each part and clean with a clean lint-free shop towel.

Apply SRAM Butter Grease to the new seals and o-rings.



SRAM Butter Grease

200 Hour Service FA Control Module Removal


- 1 The compression damper must be in the OPEN position before removing the Control Module.  
 Press and hold the Menu button until one LED pulses red.  
 If necessary, press and release the (+) or (-) adjuster button until the red OPEN LED pulses.



- 2 Remove the SRAM battery and install the battery block.  
 Install the battery cover on the SRAM battery and set it aside.  
**Optional:** Insert the SRAM battery onto the battery charger.



- 3** Loosen each Flight Attendant Control Module set screw.  
Do not remove the set screws.

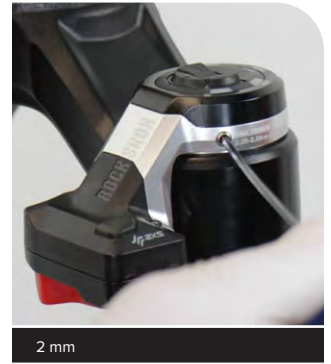

- 4** Carefully remove the Flight Attendant Control Module from the compression damper top cap. Use both thumbs to evenly push the Control Module straight up and out of the top cap.

**NOTICE**

Do not damage the internal mechanism when removing the Control Module.



- 5** Clean the underside of the Control Module with a damp clean shop towel.  
Set the Control Module aside.

**NOTICE**


Do not spray any cleaners onto the Control Module.



- 6** Carefully remove the inner damper top cap / Control Module o-ring seal.

**NOTICE**


Do not scratch the o-ring gland. Scratches can cause debris to enter the top cap under the Flight Attendant Control Module.

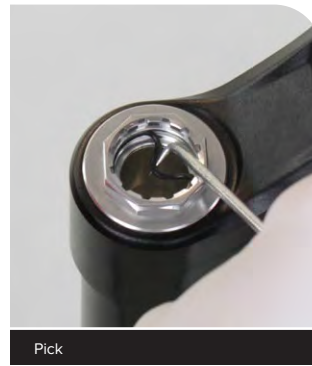

Clean the inside of the top cap and o-ring gland with a damp, clean shop towel.

**NOTICE**

Do not spray any cleaners into the top cap or on top of the compression damper.

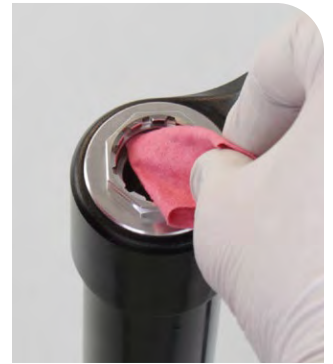

- 1 Unthread the damper top cap and remove the damper assembly.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.




Top cap / Cassette tool




- 2 Clean the inside and outside of the upper tube.



RockShox Suspension Cleaner

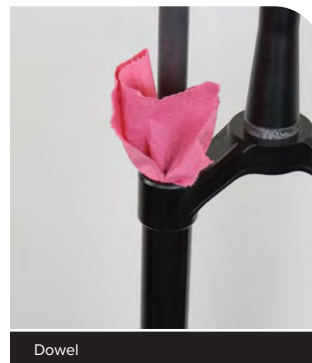


Dowel

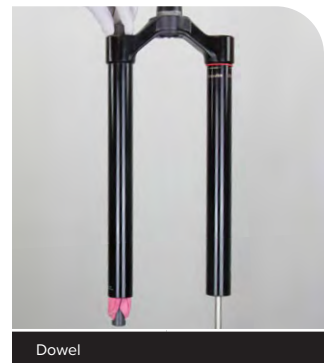

Dowel

- 1 Insert the rebound adjuster knob into the rebound shaft until it contacts the rebound adjuster screw. Rotate the knob counter-clockwise until it stops to open the rebound. Remove the rebound adjuster knob from the shaft.

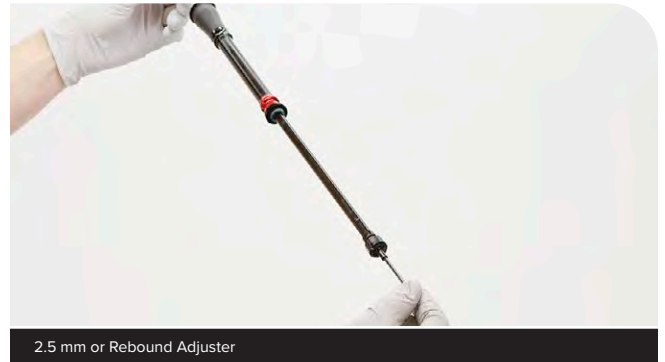


2.5 mm or Rebound Adjuster

- 2 Remove the bleed screw from the damper side body.

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

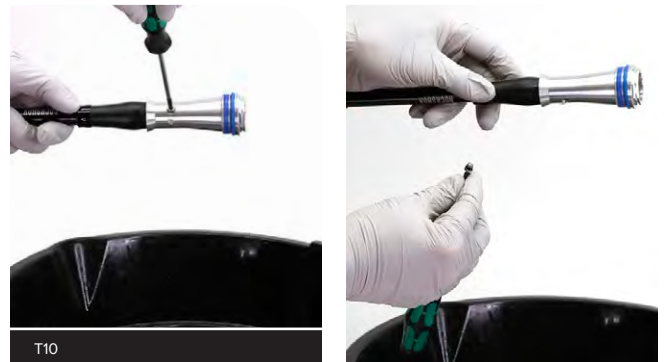

T10

- 3 Hold the damper over an oil pan. Compress the rebound shaft to purge the oil from the port in the damper side body. Cycle the rebound shaft to empty the oil from the damper side body.

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.



- 4 Fill a bleed syringe full with suspension oil. Slowly depress the plunger to remove any air bubbles from the syringe.

**NOTICE**

Only use the syringe included with the RockShox Standard Bleed kit. Do not use syringes that have been in contact with DOT brake fluid. DOT brake fluid will permanently damage the damper.




Maxima PLUSH 3wt

RockShox Bleed Syringe

- 5** Hold the damper horizontally. Thread the syringe into the damper side body bleed port. Inject the oil into the damper assembly.

Release the plunger and air will purge into the syringe. Compress and release the plunger to inject oil into the damper. Refill the syringe when necessary.

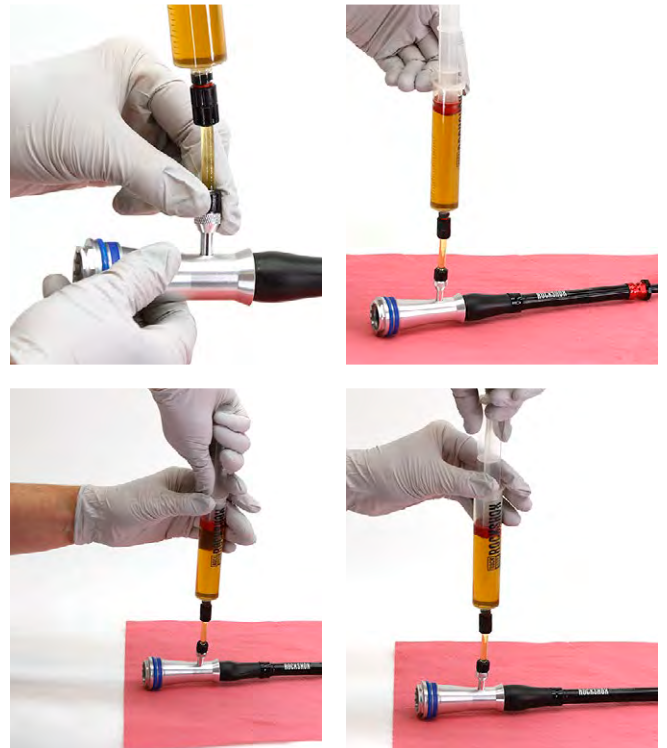

- 6** Remove the bleed syringe from the damper side body. *Make sure the rebound shaft is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*

Fill the bleed syringe half full with suspension oil. Slowly depress the plunger to remove any air bubbles from the syringe.

**NOTICE**

Only use the syringe included with the RockShox Standard Bleed kit. Do not use syringes that have been in contact with DOT brake fluid. DOT brake fluid will permanently damage the damper.



Hold the damper horizontally. Thread the syringe into the damper side body bleed port.



**7** Inject the oil into the damper assembly.

Compress the rebound shaft. The syringe will fill up.  
Depress the syringe to inject oil into the damper assembly and allow the rebound shaft to fully extend.  
Repeat cycling the fluid 3-4 times.



**8** Push the syringe handle down, then release the plunger. Allow the bladder to come to a natural resting position by waiting a few moments until the syringe stops filling.

Use a shop towel to cover the bleed tip and bleed port, then unthread and remove the syringe.

*Make sure the damper is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.



**9** Install the bleed screw.



T10

**10** Rapidly push the rebound shaft in and out 15-20 times.




**11** Compress the damper in a vertical position for five minutes. This will allow the remaining bubbles to float to the top.



**12** Extend the rebound shaft.  
Remove the bleed screw. Thread a half full syringe into the bleed port.

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

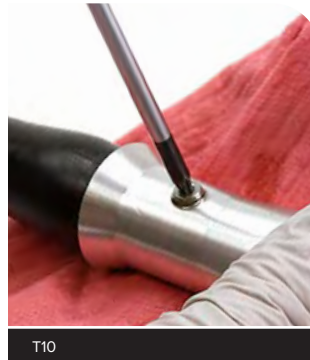

**13** Compress the rebound shaft. The syringe will fill up.  
Depress the syringe to inject oil into the damper assembly and allow the rebound shaft to fully extend.  
Repeat cycling the fluid 3-4 times.  
*If bubbles still purge, then repeat step 11-13 until there are no more bubbles.*





- 14** Push the syringe handle down, then release the plunger. Allow the bladder to come to a natural resting position by waiting a few moments until the syringe stops filling.

Use a shop towel to cover the bleed tip and bleed port, then unthread and remove the syringe.

*Make sure the damper is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*

**⚠ CAUTION - EYE HAZARD**

Oil will eject from the bladder assembly if the bladder is not in its resting position. Wear safety glasses.



- 15** Install the bleed screw.  
Cycle the rebound shaft a few times. If the damper still feels like it has air inside, go back to step 10 and repeat.

Clean the Charger Race Day 2 Damper assembly.




T10

1.7 N·m (15 in-lb)

- 1 Use a Schrader valve core tool to rotate the keyed adjuster clockwise until it lightly contacts the stop point, to the locked out or firmest position.

**NOTICE**

Do not over-rotate the keyed adjuster against the stop point. Over-rotation, or tightening, against the stop point can damage internal parts.

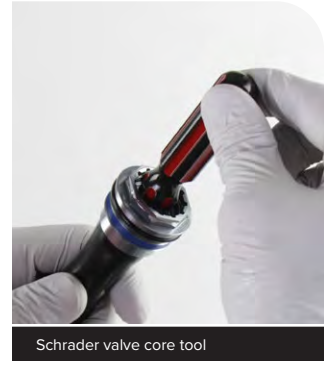

Schrader valve core tool

- 2 Position the rebound damper shaft squarely on a flat surface while holding the compression circuit closed with the Schrader valve core tool.


Push down on the damper assembly to test the bleed.

Consistent resistance should be felt with no gaps in movement. If gaps are felt during compression, repeat the bleed process.





Schrader valve core tool

- 1 Remove the o-ring from the top cap.  
Clean the top cap threads and o-ring groove.  
Apply grease to a new o-ring and install it.

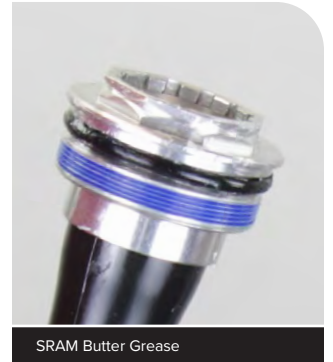

- 2 Apply grease to a new inner top cap o-ring and install it.

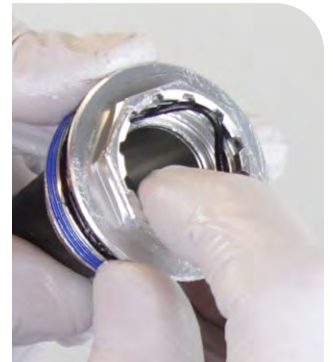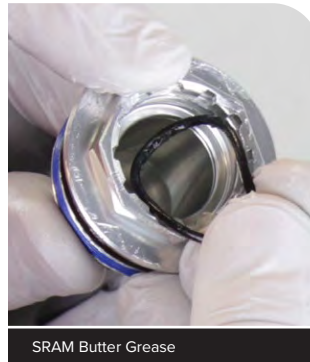

- 3** Install the damper assembly into the damper side upper tube. Use your fingers to guide the damper and damper shaft into the upper tube without scratching the shaft.



Thread the top cap into the upper tube and tighten it. Press down firmly when tightening the top cap.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.



Top cap / Cassette tool

28 N·m (250 in-lb)

- 1 The keyed ends of the Control Module output driver and the compression damper adjuster must be aligned in the same orientation before installation.

**NOTICE**

Confirm the inside of the top cap is clean before installing the Flight Attendant Control Module. Contamination will affect the compression damper seal and function of the Control Module.

Check key alignment before installation. If the keys are not aligned, rotate the adjuster key on the Control Module output driver to the same orientation as the adjuster key in the compression damper.



Flat blade screwdriver


- 2** Position the back of the Control Module parallel with the crown, and install the Control Module into the compression damper.

With the keyed ends of the Control Module output driver and compression damper adjuster aligned, press the Control Module firmly into the damper and onto the top cap squarely.

If the keyed ends are not aligned the Control Module will not snap into place inside the compression damper. If this occurs, remove the Control Module, align the keyed ends, and reinstall the Control Module.

### NOTICE

For proper clearance and function, the Flight Attendant Control Module must be installed with the battery oriented to the **BACK** of the crown only, and parallel with the fork crown. Installation of the Control Module with the battery oriented to the side or front of the crown will cause permanent damage.

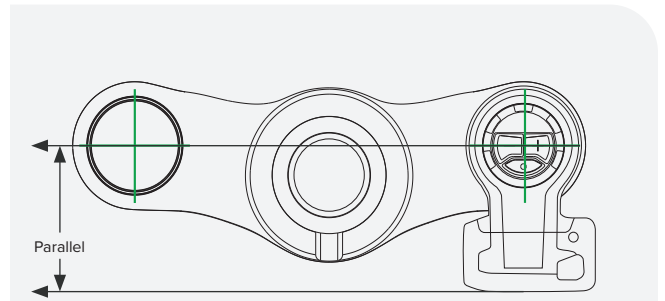

Control Module parallel with crown



- 3** Check and confirm the Control Module does not contact any part of the fork crown. Remove the Control Module, realign, and reinstall if needed.




**4** Tighten each set screw evenly finger tight to center the Control Module position on the top cap.


Tighten each set screw to the specified torque.

**NOTICE**

To avoid permanent damage to the compression damper top cap, do not over tighten the set screws.

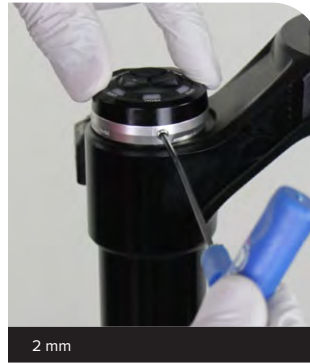

2 mm

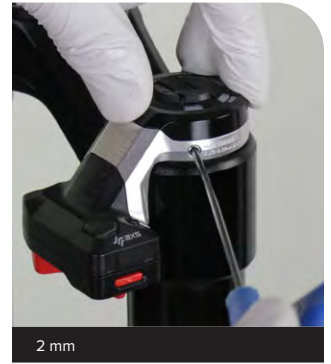

2 mm



2 mm

0.3 N·m (3 in-lb)



2 mm

0.3 N·m (3 in-lb)

**5** Remove the battery block from the Control Module.

Install the battery onto the Control Module.

**Control Module and Damper Homing:** When the battery is installed, the Control Module motor will activate and automatically reset and adjust the compression damper to the full open position. If the Control Module is properly installed, the action should operate smoothly and quickly.



If a clicking noise, or repeating motor actions are heard and felt, the Control Module is installed incorrectly. The output driver and compression damper keys may not be aligned correctly.

**Adjust Alignment:**

1. Remove the battery.
2. Partially and evenly loosen each set screw. Do not remove the set screws or the Control Module.
3. Reinstall the battery.
4. The Control Module and damper adjuster keys should self align and reset the damper compression position.
5. Tighten each set screw to the specified torque.



If alignment adjustment was unsuccessful, remove the Control Module, align the output driver and compression keys, and reinstall the Control Module onto the compression damper top cap. Repeat Control Module Installation steps 1 - 5.

**6** Check compression damper for proper function.

Press and hold the Menu button until the OPEN LED pulses red.

Press and release the (+) adjuster button until the LOCK LED pulses red. Listen for proper motor function, then compress the fork. The fork should not compress freely.

Press and release the (-) adjuster button until the OPEN LED pulses red. Listen for proper motor function, then compress the fork. The fork should compress freely.

If the Control Module does not adjust suspension positions properly, press the (-) adjuster button until the OPEN LED pulses red, remove the battery, then remove the Control Module.

Repeat steps 1 - 6 and check function again.



**200 Hour Service** Continue the 200 Hour Service with [Lower Leg Installation](#).



**CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray RockShox Suspension Cleaner or isopropyl alcohol onto each part and clean with a clean lint-free shop towel.

Apply SRAM Butter grease to the new seals and o-rings.




SRAM Butter Grease

- 1 RL:** Turn the lockout adjuster knob to the open, unlocked position. Remove the knob.




RL Unlocked

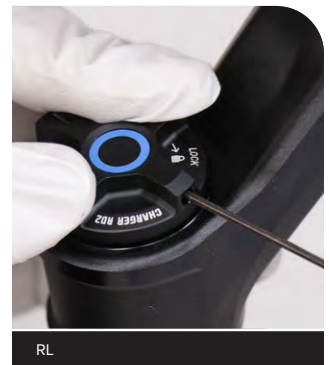

RL

Remove the detent plate. Loosen the adapter knob. Remove the adapter knob.

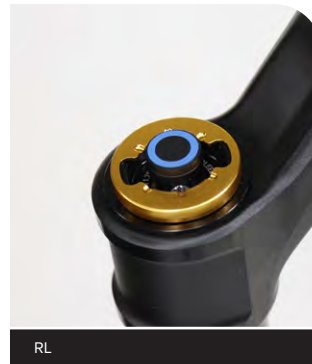


RL




2 mm

- RL R:** Loosen the remote spool screw and remove the remote spool.

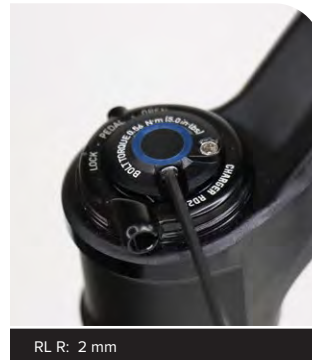

RL R: 2 mm

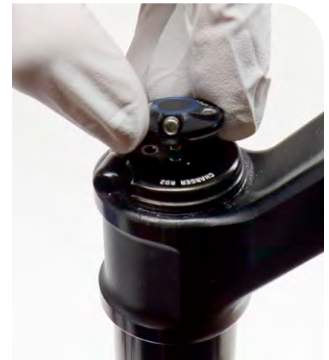

**RL R:** Loosen the cable stop collar screw and remove the cable stop collar.



**2** Unthread the damper top cap and remove the damper assembly. Press down firmly when loosening the top cap.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.




Clean the upper tube threads.



**3** Replace the o-ring on the top cap.  
*The o-ring color may vary. Replace the colored o-ring with the black o-ring in the spare parts kit.*



- 1 Insert the rebound adjuster knob into the rebound shaft until it contacts the rebound adjuster screw. Rotate the knob counter-clockwise until it stops to open the rebound. Remove the rebound adjuster knob from the shaft.

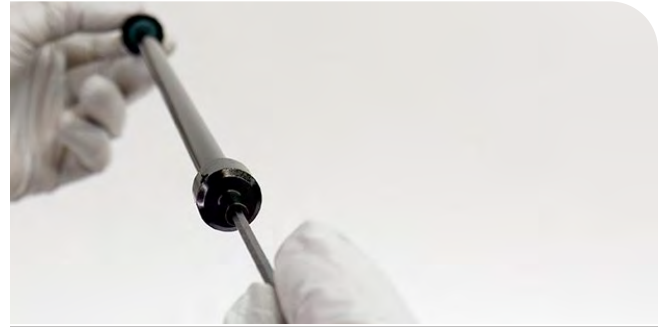


2.5 mm or Rebound Adjuster

- 2 Remove the bleed screw from the top cap.

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

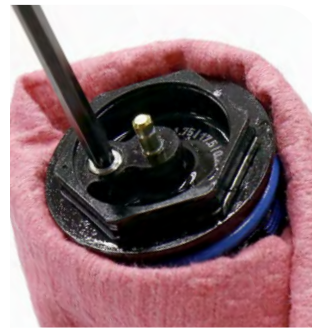

T10



- 3 Hold the damper over an oil pan. Compress the rebound shaft to purge the oil from the port in the damper top cap. Cycle the rebound shaft to empty the oil from the damper top cap.

**CAUTION**


Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.



- 4 Fill a bleed syringe full with suspension oil. Slowly depress the plunger to remove any air bubbles from the syringe.

**NOTICE**

Only use the syringe included with the RockShox Standard Bleed kit. Do not use syringes that have been in contact with DOT brake fluid. DOT brake fluid will permanently damage the damper.

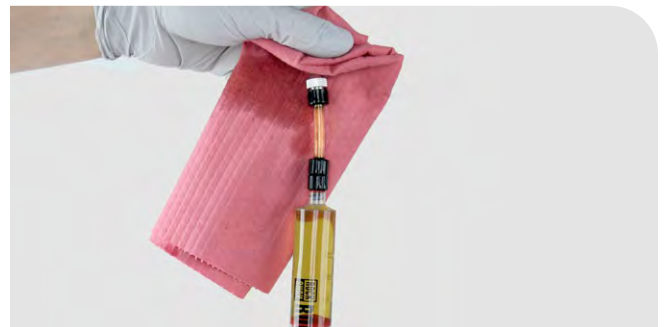

Maxima PLUSH 3wt

RockShox Bleed Syringe

- 5** Hold the damper vertically. Thread the syringe into the top cap bleed port. Inject the oil into the damper assembly.

Release the plunger and air will purge into the syringe. Compress and release the plunger to inject oil into the damper. Refill the syringe when necessary.




- 6** Remove the bleed syringe from the top cap.

*Make sure the rebound shaft is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*



Fill the bleed syringe half full with suspension oil. Slowly depress the plunger to remove any air bubbles from the syringe.

**NOTICE**

Only use the syringe included with the RockShox Standard Bleed kit. Do not use syringes that have been in contact with DOT brake fluid. DOT brake fluid will permanently damage the damper.

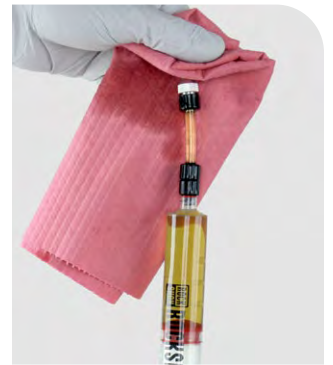

- 7** Hold the damper vertically. Thread the syringe into the top cap bleed port.

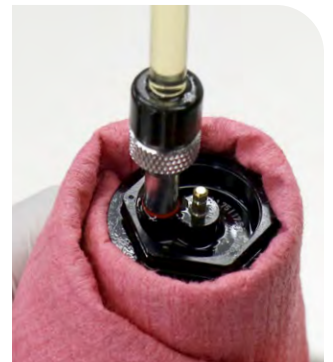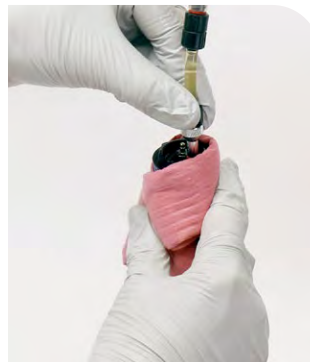

**8** Inject the oil into the damper assembly.

Push the assembly down to compress the rebound shaft. The syringe will fill up.

Depress the syringe to inject oil into the damper assembly and allow the rebound shaft to fully extend.

Repeat cycling the fluid 3-4 times.




**9** Push the syringe handle down, then release the plunger. Allow the bladder to come to a natural resting position by waiting a few moments until the syringe stops filling.

Use a shop towel to cover the bleed tip and bleed port, then unthread and remove the syringe.


*Make sure the damper is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*

**⚠ CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

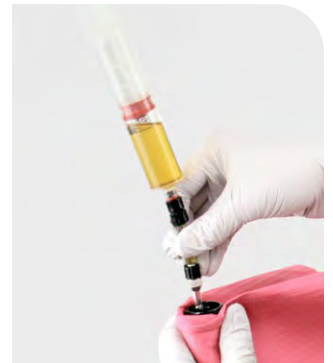

**10** Install the bleed screw.

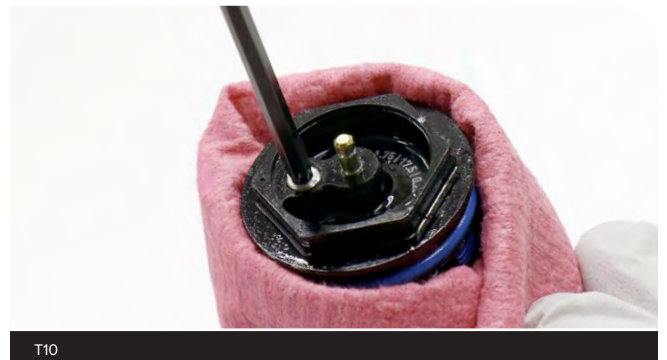

T10

**11** Rapidly push the rebound shaft in and out 15-20 times.





**12** Compress the damper in a vertical position for five minutes. This will allow the remaining bubbles to float to the top.



**13** Extend the rebound shaft.  
Remove the bleed screw. Thread a half full syringe into the bleed port.

**CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

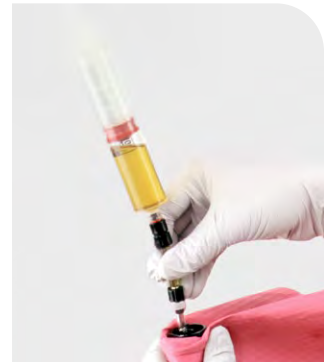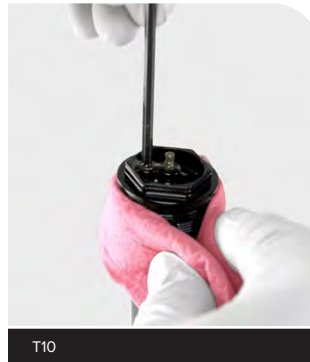

**14** Push the assembly down to compress the rebound shaft. The syringe will fill up.

Depress the syringe to inject oil into the damper assembly and allow the rebound shaft to fully extend.

Repeat cycling the fluid 3-4 times.

*If bubbles still purge, then repeat step 11-13 until there are no more bubbles.*




- 15** Push the syringe handle down, then release the plunger. Allow the bladder to come to a natural resting position by waiting a few moments until the syringe stops filling.

Use a shop towel to cover the bleed tip and bleed port, then unthread and remove the syringe.

*Make sure the damper is fully extended and there is a small amount of positive pressure in the system before the syringe is removed. This prevents air getting back into the damper.*

**⚠ CAUTION**

Always wear safety glasses. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

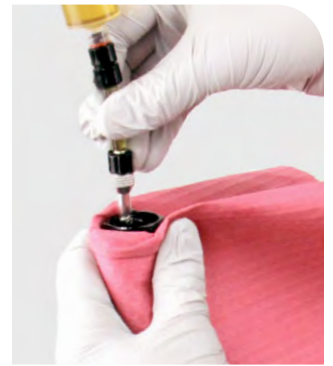

- 16** Install the bleed screw.  
Cycle the rebound shaft a few times. If the damper still feels like it has air inside, go back to step 10 and repeat.

Clean the Charger Race Day 2 Damper assembly.



T10 1.7 N·m (15 in-lb)

- 1 Install the Charger Race Day 2 Damper into the damper side upper tube.



- 2 Thread the top cap into the upper tube and tighten it. Press down firmly when tightening the top cap.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.





- 3 RL:** Position the detent plate with the cutouts placed in line with the fork crown. The 2P detent plate has two detents and the 3P has three. The controls install the same; they are not interchangeable.


**NOTICE**

To change from a 2P to a 3P damping system, you must replace the damper assembly. Consult the RockShox Spare Parts Catalog at [www.sram.com/service](http://www.sram.com/service) for part numbers.


Install the adapter knob with the screw facing forward. Rotate the knob clockwise until it stops.




RL- 2P

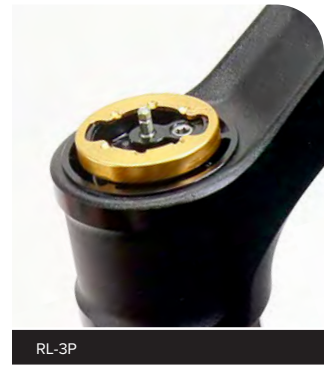

RL-3P

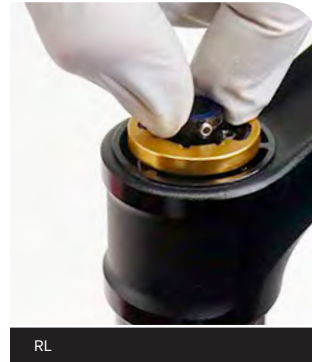


RL

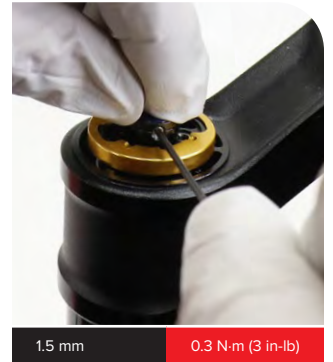

1.5 mm

0.3 N·m (3 in-lb)

Install the adjuster knob on the top cap so the flange is pointed away from the steerer tube. Rotate the adjuster knob clockwise until it stops on the last detent and the set screw is facing forward. Hold the knob down and tighten the set screw.

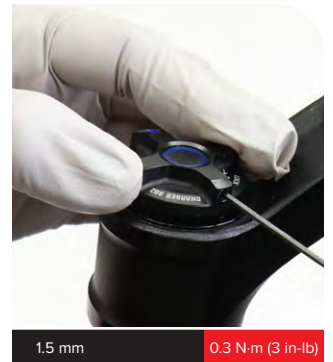

1.5 mm


0.3 N·m (3 in-lb)

- 4 RL R:** Install the cable stop collar with the housing guide oriented forward. Tighten the set screw.

Install the remote spool with the set screw facing forward. Tighten the set screw.


**NOTICE**

The cable stop collar and remote cable housing must clear the lower leg arch when the fork is fully compressed.

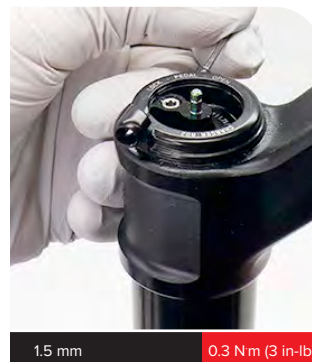

1.5 mm

0.3 N·m (3 in-lb)

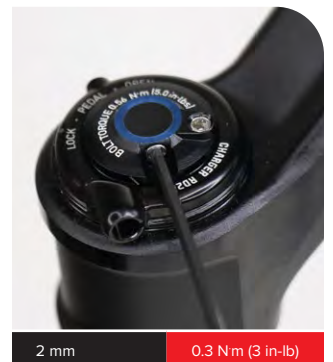

2 mm

0.3 N·m (3 in-lb)

**200 Hour Service** Continue the 200 Hour Service with [Lower Leg Installation](#).

**⚠ CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray RockShox Suspension Cleaner or isopropyl alcohol onto each part and clean with a clean lint-free shop towel.


Apply SRAM Butter grease to the new seals and o-rings.





- 1 RL:** Turn the compression adjuster knob counter-clockwise, to the full open position, until it stops.



- 2 RL:** Remove the retaining screw and remove the knob.

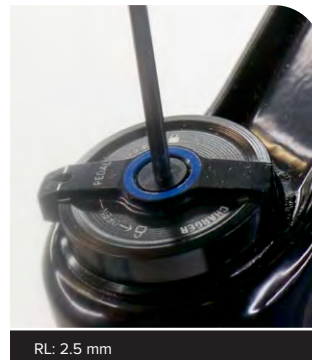

Remove the glide ring from the knob. Apply grease and install a new glide ring into the groove of the knob.

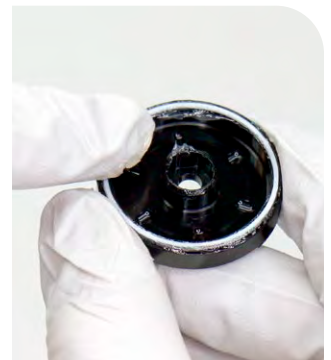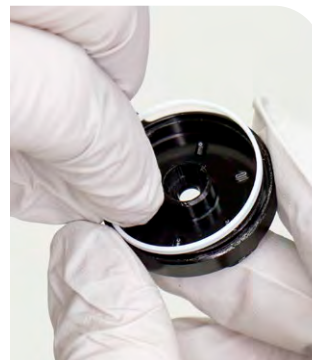

- 3** **RL R:** Loosen the set screw and remove the cable spool and cable stop collar.



RL R: 2.5 mm



RL R: 2.5 mm


- 4** Unthread the damper top cap and remove the damper assembly.  
Clean the upper tube threads.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.



24 mm

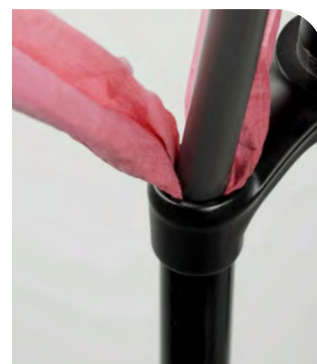

- 1 Clamp the Charger Damper RL cartridge tube into a vise with Charger vise blocks. Unthread the top cap from the cartridge.

**NOTICE**

The cartridge tube and vise block must be dry and free of oil to provide enough grip to unthread the top cap. If the cartridge tube slips, clean and dry the tube and vise blocks.




Vise with Charger Vise Blocks



24 mm



- 2 Carefully remove the compression damper.

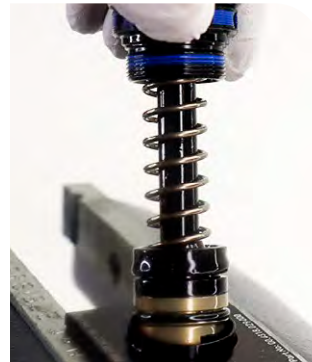

- 3 Remove the cartridge tube and rebound damper assembly from the vise and pour the oil into an oil pan.  
Clean the exterior of the cartridge tube.



- 4 Clamp the cartridge tube into a vise with Charger vise blocks. Use the seal head wrench flats and remove the rebound damper assembly.

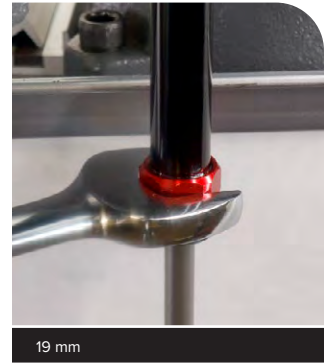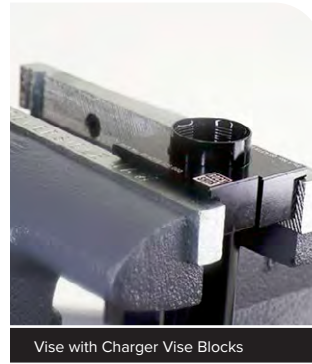

- 5 The solid band glide ring is not removable and only requires cleaning. Do not remove.

**NOTICE**

Do not remove the solid band glide ring. The solid band glide ring is not serviceable. Removal of the solid band glide ring will require a new damper assembly.

The color of the solid band glide ring may vary.



- 6 Remove the seal head from the rebound damper shaft. Discard the seal head.



- 7** Spray RockShox Suspension Cleaner or isopropyl alcohol into the cartridge tube and clean the inside of the tube with a shop towel and a thin dowel ( $\leq 16$  mm diameter).

Inspect the inside of the cartridge tube for scratches.

### NOTICE

Scratches on the inside surface of the tube can cause oil to leak. If an internal scratch is visible, the cartridge tube may need to be replaced.



- 8** Remove the o-rings from the compression damper and discard them.

Apply grease to new o-rings and install them.

*Compression damper o-ring color may vary. Replace the o-ring with a black o-ring from the spare parts kit.*



**⚠ CAUTION**


Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

- 1 Apply grease to the rebound damper shaft. Insert the rebound damper shaft into the recessed end of the seal head.

Slide the seal head toward the piston.




- 2 Insert the rebound adjuster knob into the rebound damper and rotate it counter-clockwise until it stops. This is the full open position.

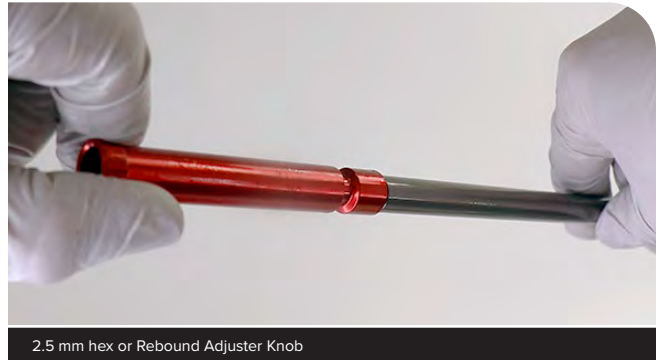

2.5 mm hex or Rebound Adjuster Knob

- 3 Clamp the Charger Damper RL cartridge tube into a vise with Charger vise blocks.

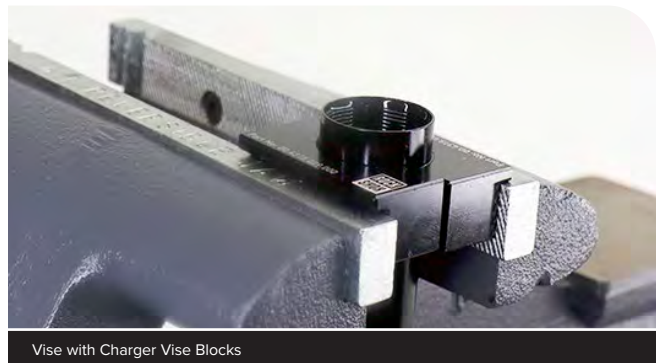

Vise with Charger Vise Blocks


- 4 Thread the cartridge tube into the seal head hand tight.  
Pull the damper shaft to full extension.  
Thread a bottom bolt into the rebound damper shaft.



- 5** Pour Maxima PLUSH 3wt suspension oil into the tube until it is almost half full. Slowly cycle the rebound damper shaft in and out half way to remove air bubbles trapped under the rebound damper piston. Stop when no bubbles are visible in the oil.



- 6** Push the rebound damper into the cartridge tube until the rebound shaft is extended to the 37.5 mm. Do not push the damper into the tube any further.

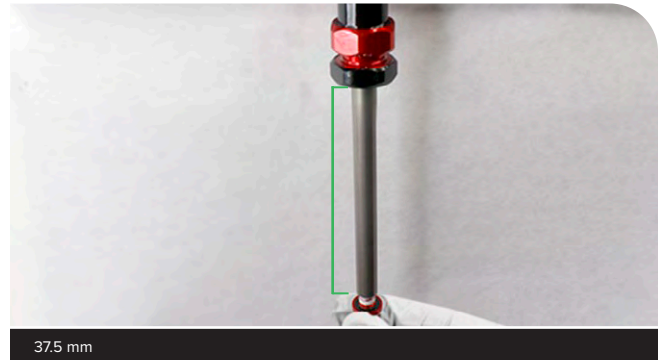

- 7** Pour Maxima PLUSH 3wt suspension oil into the tube until the oil is just below the purge holes.



- 8** Insert the compression damper into the cartridge tube and slowly push it into the tube. The rebound damper will slowly extend as the compression damper is installed; this is normal.

Firmly push down and thread the top cap into the tube.

**⚠ CAUTION**

Always wear safety glasses. Oil will exit the cartridge tube bleed hole when installing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.






- 9 Tighten the top cap.  
Tighten the rebound damper seal head.

**⚠ WARNING - CRASH HAZARD**


Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

**NOTICE**

Do not scratch the rebound damper shaft. Scratches can cause oil to leak.

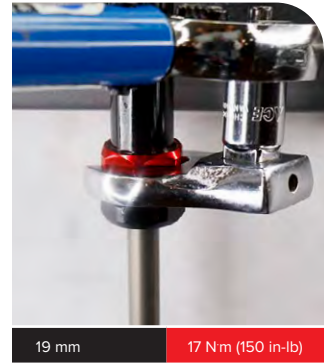

- 10 Pull the rebound damper to full extension.  
Push the rebound damper into the cartridge tube until the rebound shaft is extended to the 37.5 mm. Secure a plastic cable tie around the shaft to mark the position.  
Do not push the damper into the tube any further.

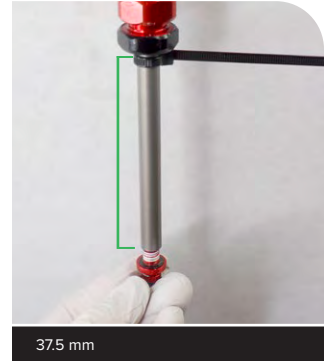

- 11 Remove the damper from the vise. Loosely wrap a shop towel over the damper cartridge purge holes. Hold the damper vertical and slowly pull the shaft out to full extension. Slowly push the rebound damper shaft into the tube until the cable tie contacts the seal head, then stop. Do not push the damper in any further.  
Repeat 3-5 more times. This will allow any excess oil and air to escape from the system.  
Remove the bottom bolt. Clean the damper. Do not remove the cable tie.

**⚠ CAUTION**

Always wear safety glasses. Oil may exit the cartridge tube bleed hole when compressing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.



## Test Compression

**1 RL:** Use the adjuster knob to rotate the compression cam clockwise, until it stops, to the firm position.

**RL R:** Use a 7 mm wrench to hold the cam closed, full clockwise until it stops, while compressing the damper.

The cable tie must remain at 55 mm (100 mm travel forks) or 34 mm (120 mm travel forks), from the end of the shaft. Do not compress the rebound damper further than this point.

Cover the purge holes with a shop towel.




### ⚠ CAUTION

Always wear safety glasses. Oil may exit the cartridge tube bleed hole when compressing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

Push down on the damper assembly slowly to test the firmest compression setting. Firm and consistent resistance should be felt with no gaps in movement.

Rotate the compression damper to open setting and repeat the compression test. Light consistent resistance should be felt with no gaps in movement.

If gaps are felt during compression, repeat the oil fill and purge process. If the assembly process was successful, set the compression damper to the open setting and remove the cable tie.

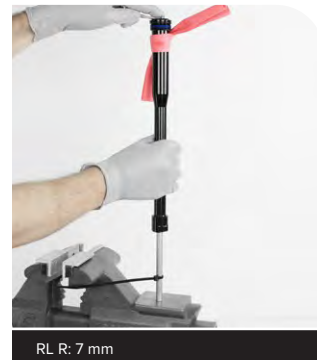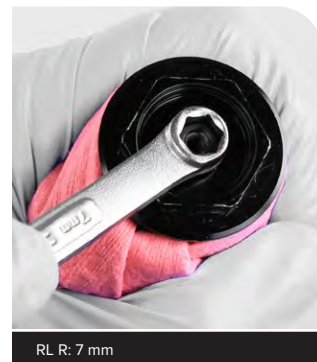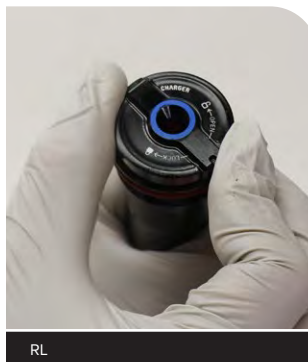

**NOTICE**

2P and 3P dampers and controls install the same unless otherwise specified. 2P and 3P controls are not interchangeable. To change from a 2P to a 3P or vice versa, consult the RockShox Spare Parts Catalog at [www.sram.com/service](http://www.sram.com/service) for the damper part number to replace the assembly.



- 1 Install the Charger Damper RL or RL R assembly into the damper side upper tube. Thread the top cap into the upper tube and tighten it.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.



- 2 **RL:** Install the adjuster knob with the tab in the 7-8 o'clock, unlocked position.  
Install and tighten the retaining screw.

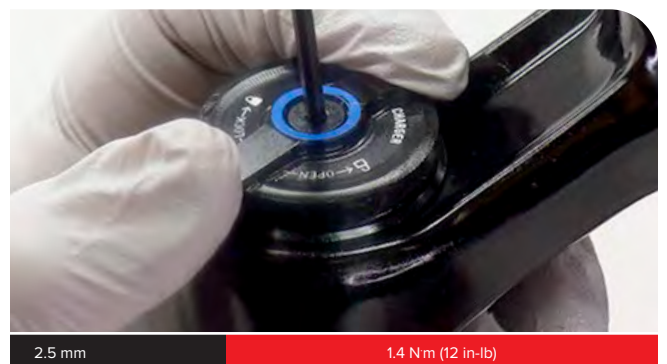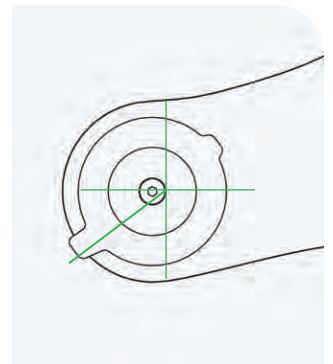

- 3** RL R: Install and tighten the cable stop collar with the housing guide oriented forward.

**NOTICE**


The cable stop collar and remote cable housing must clear the lower leg arch when the fork is fully compressed.



2 mm

0.5 N-m (4 in-lb)

Install the remote spool onto the hex adjuster with the cable set screw oriented within the 20 degree range in the diagram.

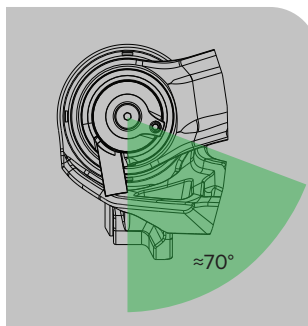

RL R



RL R

Install and tighten the remote spool retaining screw.

Consult the applicable user manual at [www.sram.com/service](http://www.sram.com/service) for cable and remote installation instructions.



RL R: 2.5 mm

1.4 N-m (12 in-lb)



**200 Hour Service** Continue the 200 Hour Service with [Lower Leg Installation](#).

**⚠ CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.

**NOTICE**

Inspect each part for scratches. Do not scratch any sealing surfaces when servicing your suspension. Scratches can cause leaks.

When replacing seals and o-rings, use your fingers or a pick to remove the seal or o-ring. Spray RockShox Suspension Cleaner or isopropyl alcohol onto each part and clean with a clean lint-free shop towel.




Apply SRAM Butter grease to the new seals and o-rings.



- 1 RL:** Turn the compression adjuster knob counter-clockwise, to the full open position, until it stops.



- 2 RL:** Remove the retaining screw and remove the knob. Remove the glide ring and o-ring. Clean the top cap grooves.

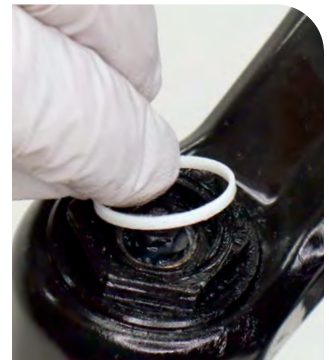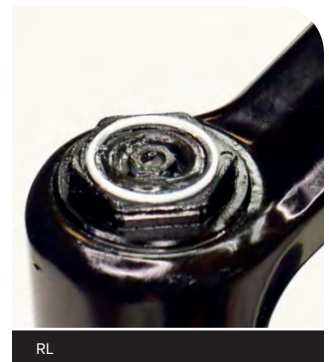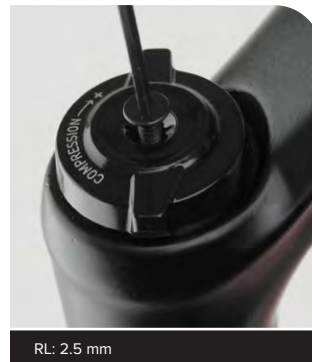

**3** **RL R:** Loosen the set screw and remove the cable spool and cable stop collar.

Remove the glide ring. Clean the top cap grooves.



RL R: 2.5 mm



RL R: 2 mm





**4** Unthread the damper top cap and remove the damper assembly.  
Clean the upper tube threads.

**NOTICE**

The fork top caps are tightened to a high torque value. Ensure the fork is held securely in the bicycle stand. To avoid damage to the top cap, press the top cap / cassette tool squarely and firmly down when loosening. Use a socket wrench with a long handle for extra leverage.



24 mm

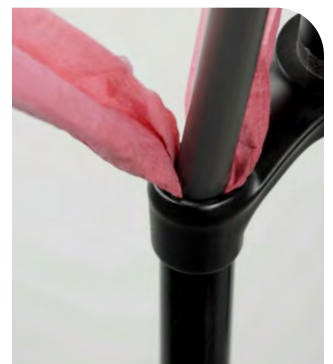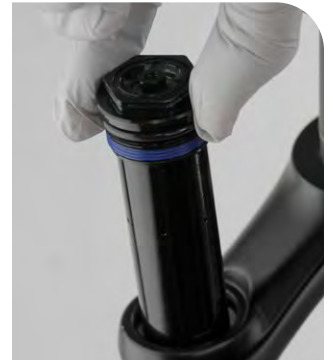

- 1 Clamp the Rush Damper cartridge tube into a vise with Reverb vise blocks.



Reverb vise blocks

- 2 Unthread the top cap from the cartridge.

**NOTICE**

The cartridge tube and vise block must be dry and free of oil to provide enough grip to unthread the top cap. If the cartridge tube slips, clean and dry the tube and vise blocks.



24 mm


- 3 Carefully remove the compression damper.



- 4 Remove the cartridge tube and rebound damper assembly from the vise and pour the oil into an oil pan.  
Clean the exterior of the cartridge tube.



- 5 Clamp the cartridge tube into a vise with Reverb vise blocks. Use the seal head wrench flats and remove the rebound damper assembly.

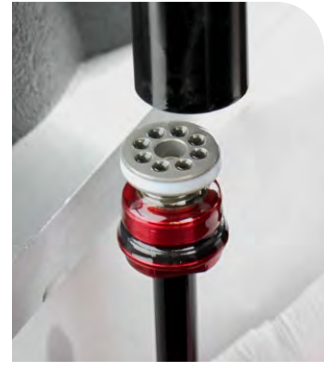

- 6 The solid band glide ring is not removable and only requires cleaning. Do not remove.

**NOTICE**

Do not remove the solid band glide ring. The solid band glide ring is not serviceable. Removal of the solid band glide ring will require a new damper assembly.

The color of the solid band glide ring may vary.



- 7 Remove the seal head from the rebound damper shaft. Discard the seal head.







- 8 Spray RockShox Suspension Cleaner or isopropyl alcohol into the cartridge tube and clean the inside of the tube with a shop towel and a thin dowel ( $\leq 16$  mm diameter).


Inspect the inside of the cartridge tube for scratches.

**NOTICE**

Scratches on the inside surface of the tube can cause oil to leak. If an internal scratch is visible, the cartridge tube may need to be replaced.

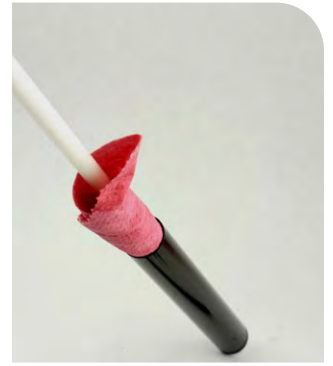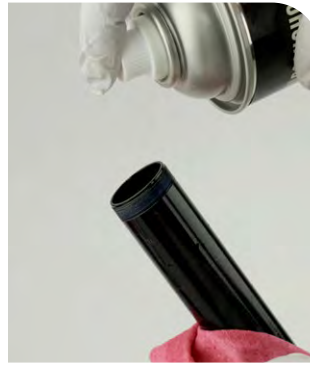

- 9 Remove the o-rings from the compression damper and discard them. Apply grease to new o-rings and install them.

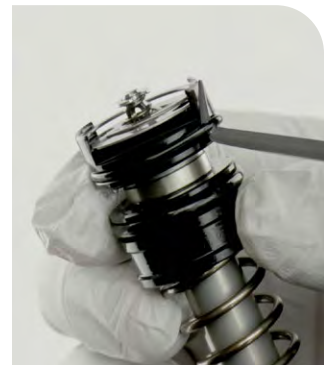

- 10 Apply grease to the inner seal and bushing in the new rebound damper seal head.





SRAM Butter Grease


**⚠ CAUTION**

Place an oil pan on the floor underneath the product during service to catch any drained or spilled fluids. To avoid a slip and fall, and possible injury or harm, immediately clean any oil, fluid, grease, or lubricant from the floor in your work area.


- 1 Apply grease to the rebound damper shaft. Insert the rebound damper shaft into the recessed end of the seal head.  
Slide the seal head toward the piston.

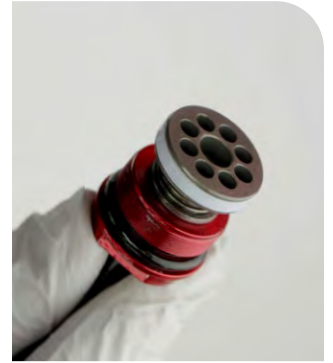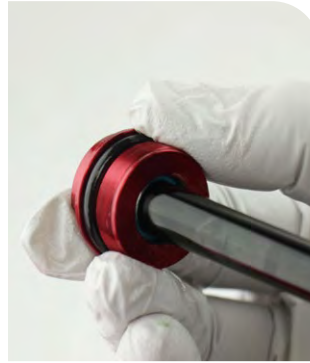



- 2 Insert the rebound adjuster knob into the rebound damper and rotate it counter-clockwise 16 clicks from the closed position. This is the full open position.

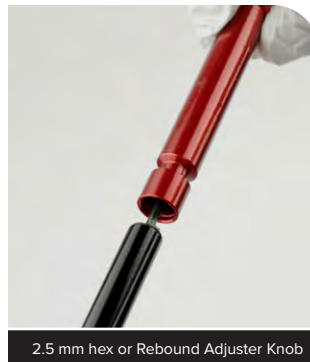

2.5 mm hex or Rebound Adjuster Knob

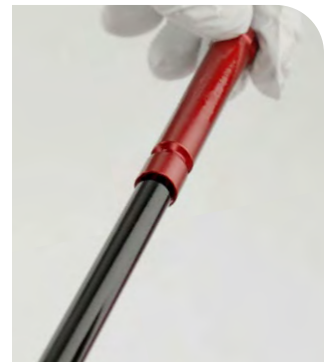

- 3 Thread the cartridge tube into the seal head hand tight.  
Thread a bottom bolt into the rebound damper shaft.

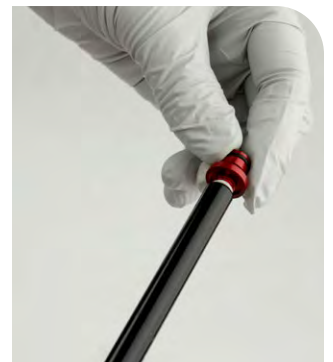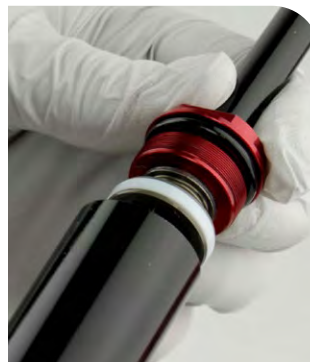


- 4 Apply Loctite Blue 242 threadlocker, or equivalent, onto two to three (A) cartridge tube threads.


**⚠ WARNING - CRASH HAZARD**

To avoid separation of parts, threadlocker must be applied as instructed. Failure to apply threadlocker could result in separation of the parts, and possible **SERIOUS INJURY OR DEATH**.

Clamp the cartridge tube into a vise with Reverb Vise Blocks. Pull the damper shaft to full extension.

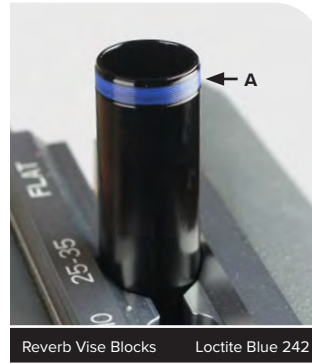


- 5 Pour Maxima PLUSH 3wt suspension oil into the tube until it is almost half full. Slowly cycle the rebound damper shaft in and out half way to remove air bubbles trapped under the rebound damper piston. Stop when no bubbles are visible in the oil.

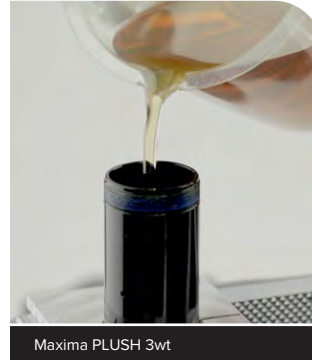

- 6 Push the rebound damper into the cartridge tube until the rebound shaft is at the "A" measurement. Do not push the rebound damper into the tube any further.

Fork travel (mm)	A (mm)
100	120
120	100

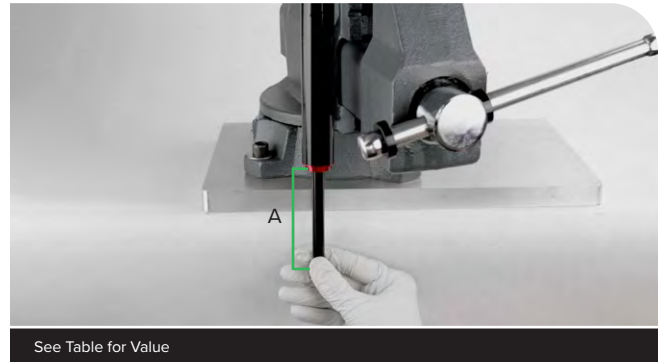

- 7 Pour Maxima PLUSH 3wt suspension oil into the tube until the oil is just below the purge holes.





- 8 Tie a shop towel around the damper to prevent oil from spilling. Insert the compression damper into the cartridge tube and slowly push it into the tube. The rebound damper will slowly extend as the compression damper is installed; this is normal.

Firmly push down and thread the top cap into the tube.

**⚠ CAUTION**

Always wear safety glasses. Oil will exit the cartridge tube bleed hole when installing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

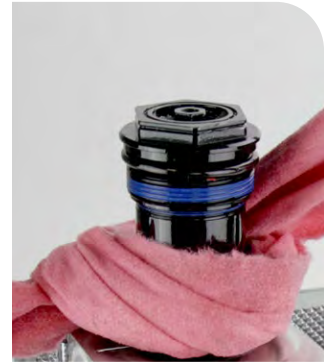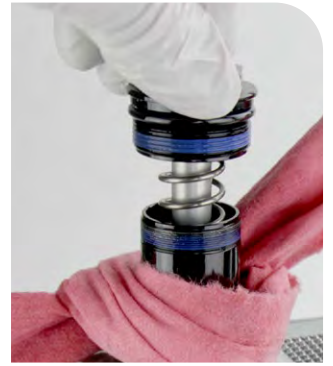

- 9 Tighten the top cap.  
Tighten the rebound damper seal head.  
Remove the damper assembly from the vise.

**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in SERIOUS INJURY OR DEATH.

**NOTICE**

Do not scratch the rebound damper shaft. Scratches can cause oil to leak.



24 mm

17 N·m (150 in-lb)



19 mm

17 N·m (150 in-lb)

**10** Remove the damper from the vise. Loosely wrap a shop towel over the damper cartridge purge holes. Hold the damper vertical and slowly pull the shaft out to full extension.

Remove the bottom bolt.

Slowly push the rebound damper shaft into the cartridge tube until the rebound damper shaft is at the "B" measurement. Do not push the rebound damper into the tube any further.



Fork travel (mm)	B (mm)
100	80
120	60

Extend the damper and push down to the "B" measurement 3-5 more times. This will allow any excess oil and air to escape from the system.

Clean the damper.

**CAUTION**

Always wear safety glasses. Oil may exit the cartridge tube bleed hole when compressing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

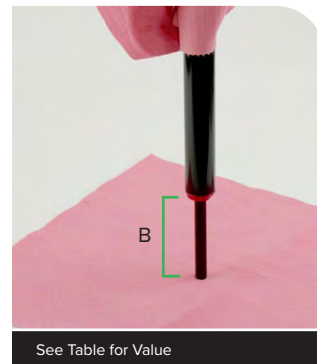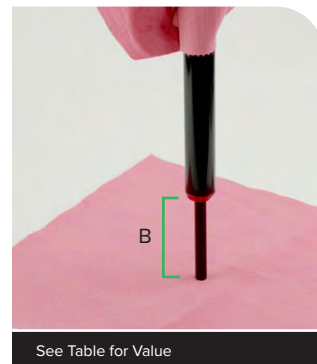

## Test Compression

**1** Use a 7 mm wrench to hold the cam closed, full clockwise until it stops, while compressing the damper.

Cover the purge holes with a shop towel.



**CAUTION**

Always wear safety glasses. Oil may exit the cartridge tube bleed hole when compressing the damper. Do not allow oil, fluid, grease, lubricant, or cleaner to contact your eyes or face. Seek immediate medical attention if irritation occurs.

Push down on the damper assembly slowly to test the firmest compression setting. Firm and consistent resistance should be felt with no gaps in movement.

Rotate the compression damper to open setting and repeat the compression test. Light consistent resistance should be felt with no gaps in movement.

If gaps are felt during compression, repeat the oil fill and purge process. If the assembly process was successful, set the compression damper to the open setting and remove the cable tie.

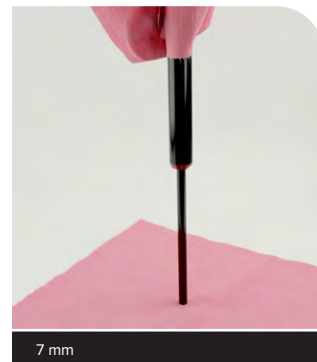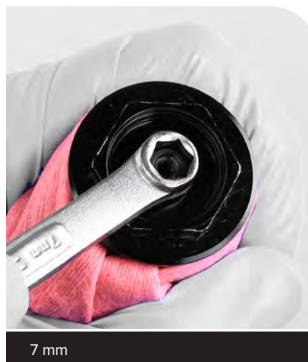

- 1 Install the damper assembly into the damper side upper tube. Use your fingers to guide the damper and damper shaft into the upper tube without scratching the shaft.



**NOTICE**

Do not scratch the rebound damper shaft. Scratches can cause oil to leak.



Thread the top cap into the upper tube and tighten it. Press down firmly when tightening the top cap.

**⚠ WARNING - CRASH HAZARD**



Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

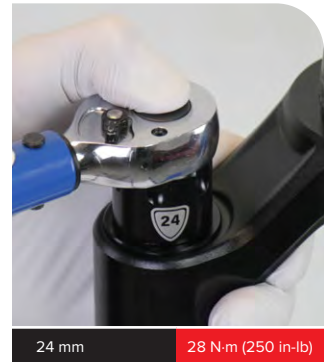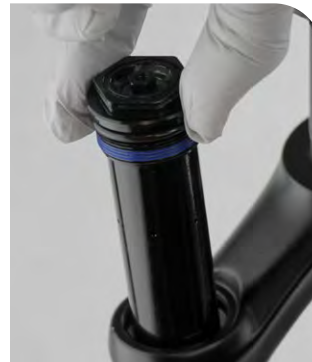

- 2 **RL:** Apply grease and install a new o-ring and glide ring. Install the glide ring into the groove and the o-ring in the center pocket of the top cap.

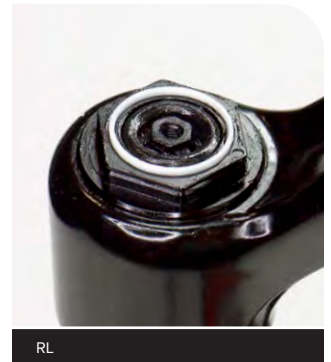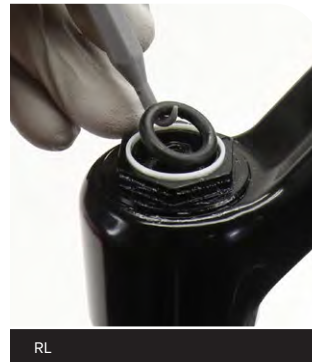


**RL R:** Apply grease and install a new glide ring into the groove of the top cap.

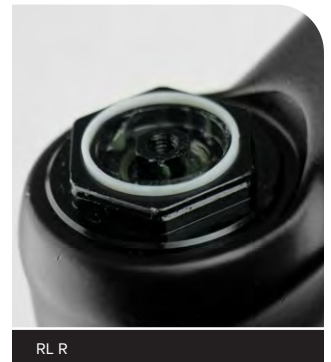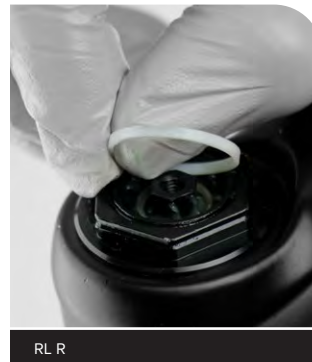

**3** **RL:** Install the adjuster knob with the tab in the 7-8 o'clock, unlocked position.

Install and tighten the retaining screw.

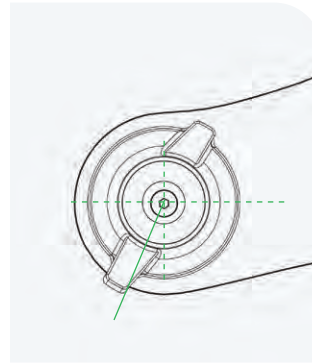



2.5 mm

1.4 N-m (12 in-lb)

**4** **RL R:** Install the cable stop collar with the housing guide oriented forward. Tighten the set screw.

**NOTICE**



The cable stop collar and remote cable housing must clear the lower leg arch when the fork is fully compressed.

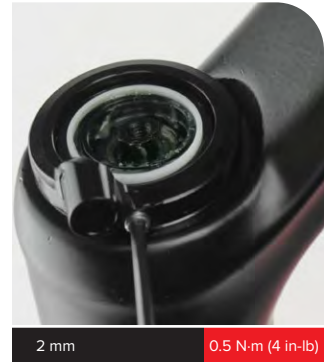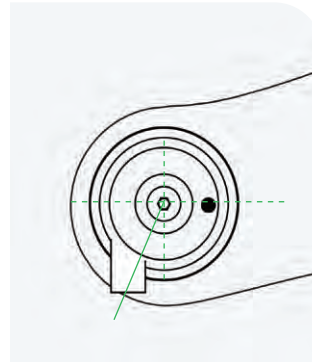

2 mm

0.5 N-m (4 in-lb)

Install the remote spool onto the hex adjuster with the cable set screw oriented  $\approx 110^\circ$  from the housing guide.

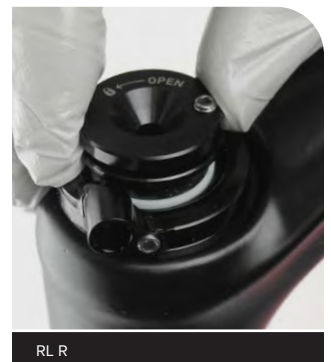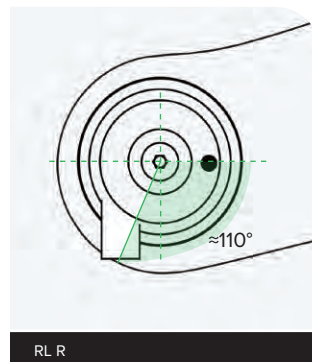

RL R

RL R

Install and tighten the remote spool retaining screw.

Consult the applicable user manual at [www.sram.com/service](http://www.sram.com/service) for cable and remote installation instructions.



RL R: 2.5 mm

1.4 N-m (12 in-lb)

**200 Hour Service** Continue the 200 Hour Service with [Lower Leg Installation](#).

**1** Clean the upper tubes.




**2** Apply grease to the inner surfaces of the wiper seals.  
*Wiper seals may already be greased from the factory. Do not apply extra grease to seals that already have grease on them.*



Grease

**3** Install the jounce bottom out bumper on the air spring shaft, if necessary. Install the bottom cup, tapered side down, into the spring side of the lower leg.

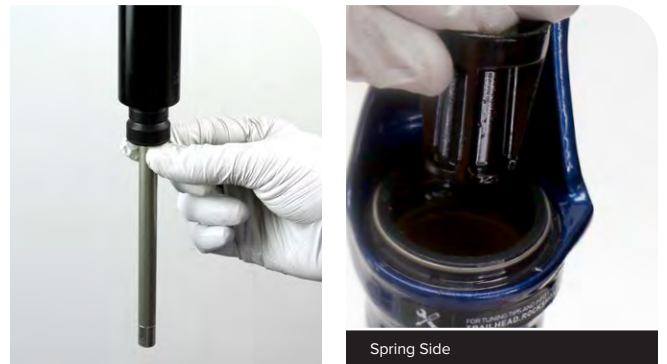

Spring Side



- 4 Slide the lower leg onto the upper tube enough to engage the upper bushing with the upper tube.

**NOTICE**

Make sure both wiper seals slide onto the tubes without folding the outer lip of either seal.



The inside bottom of the lower leg should not contact the spring or damper shafts. A gap between the shaft ends and the lower leg bolt holes should be visible.



- 5 Position the fork at an angle with the lower leg bolt holes oriented upward.

Angle a syringe fitting in each lower leg bolt hole so the fluid will only contact the inside of the lower leg.

Fork	mL
SID SL	10
SID	15

Inject suspension oil into each lower leg through the lower leg bolt hole according to the table.

**NOTICE**

Do not exceed the recommended oil volume per leg as this can damage the fork.



Heavy


SID SL: 10 mL  
SID: 15 mL



Heavy

SID SL: 10 mL  
SID: 15 mL

- 6** Slide the lower leg assembly along the upper tubes until it stops and the spring and damper shafts are visible through the lower leg bolt holes.

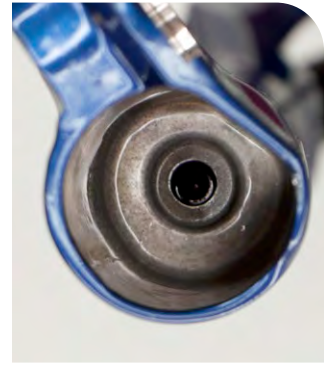

**Ultimate / Select +:** Use a 5 mm wrench to guide the damper shaft through the hole in the lower leg. Push the lower leg further onto the CSU until the damper shaft threads are exposed.

*The damper can be locked out to assist with this step.*



Ultimate / Select +: 5 mm

- 7** **200 hour service only:** Use a pick and needle nose pliers to remove the old crush washers from each bottom bolt.


Hold the crush washer with needle nose pliers and unthread the crush washer from the bolt by turning the bolt counter-clockwise with a 5 mm hex wrench.

Discard and install new crush washers.

**Ultimate / Select +:** Replace the damper side crush washer in the next step.

### NOTICE

Dirty or damaged crush washers can cause oil to leak from the fork.

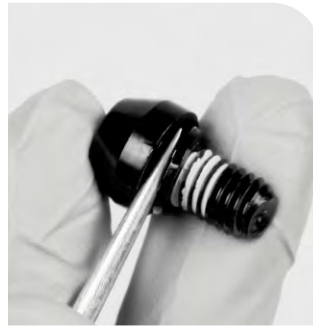

Needle Nose Pliers



Needle Nose Pliers and 5 mm

8


**⚠ WARNING - CRASH HAZARD**

Parts must be tightened to the specified torque. Failure to do so can result in **SERIOUS INJURY OR DEATH**.

Install the black bottom bolt into the **spring side** shaft.



5 mm Spring Side

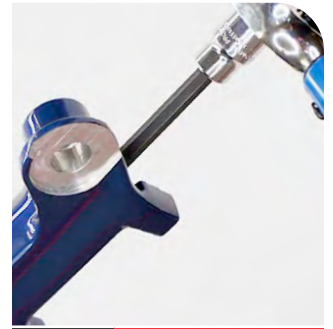

5 mm 7.3 N-m (65 in-lb)

**Ultimate / Select +:** Install the crush washer into the rebound adjuster nut. Install and tighten the rebound adjuster nut onto the **damper side** shaft.



Ultimate/Select+: 10 mm Damper Side




10 mm 8.4 N-m (74 in-lb)

**Select / Base:** Install the red bottom bolt into the **damper side** shaft.



Select / Base: 5 mm Damper Side

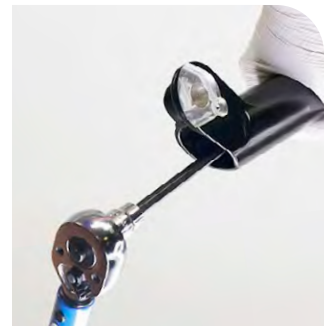

5 mm 7.3 N-m (65 in-lb)


- 9** Install the rebound damper knob. Refer to your pre-service recorded rebound setting to adjust the rebound.




Ultimate / Select +



Ultimate / Select +

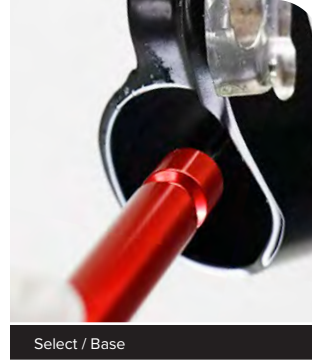

Select / Base

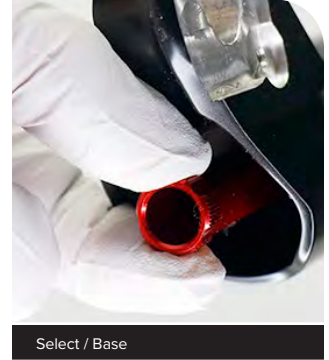

Select / Base


- 10** Refer to your pre-service recorded settings to pressurize your air spring, or use the air chart on the fork's lower leg and pressurize the air spring.

You may see a drop in the indicated air pressure on the pump gauge while filling the air spring; this is normal. Continue to fill the air spring to the recommended air pressure.

Cycling the fork will equalize the positive and negative air chambers. After the fork is cycled 3-4 times, check the pressure and add air as needed.



- 11** Install the air valve cap onto the top cap of the air spring top cap.

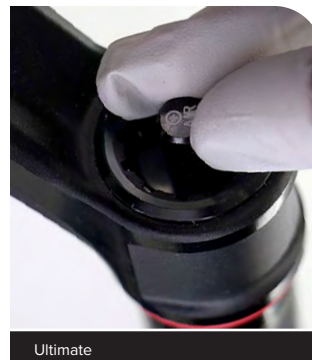


Ultimate



Select+/Select/Base

**12** Clean the entire fork.

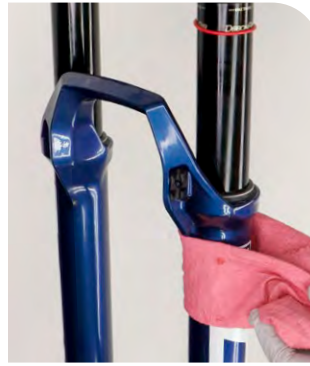

**This concludes the service of your RockShox SID suspension fork.**

For Remote user manuals, please visit [www.sram.com/service](http://www.sram.com/service).



---

ASIAN HEADQUARTERS

SRAM Taiwan  
No. 1598-8 Chung Shan Road  
Shen Kang Hsiang, Taichung City  
Taiwan

WORLD HEADQUARTERS

SRAM LLC  
1000 W. Fulton Market, 4th Floor  
Chicago, Illinois 60607  
U.S.A.

EUROPEAN HEADQUARTERS

SRAM Europe  
Paasbosweg 14-16  
3862ZS Nijkerk  
The Netherlands